

Auto Bilge Pump Installation Instructions

- To clean the water chamber remove pump housing from the mounting base by pressing in tabs on sides. Lift the pump housing away. (See Figure 3)
- To clean the impeller, remove the impeller guard screw and lift the impeller guard.
- Remove all debris that has accumulated in pump chamber and around the impeller. Ensure that all debris is removed from strainer slots around the pump base.
- Inspect the impeller to ensure that it is firmly attached to shaft and is not cracked or broken.
- Replace impeller guard, screw, and pump housing on base. Be certain that all tabs are fully engaged.
- Periodically check the electrical connections to ensure they are water-resistant and mounted high and dry.
- Do not use household cleaners on the pump because many of them may damage the pump materials.

Figure 3

