

Auto Bilge Pump Installation Instructions

CAUTION:

Read all instructions carefully before installing and using this product.

This pump is sealed and, therefore, submersible. However, the electric wire connections must not be submerged. For extra protection, coat the butt joints and adjacent wire ends liberally with liquid electrical tape.

SECURITY:

- Auto bilge pump can only be used for pumping water. It can not be used for other liquids.
- Red color positive electrode(semi-automatic)(+)Blue color positive electrode(full-automatic)(+)Black color negative electrode(-)
- Use the suitable fuse.
- The wire connections must be sealed by marine sealant.
- All wires and connections must be above the bilge water level. Unless necessary, please do not arbitrarily remove the insulator. Marine sealant oxidant should be used for all wires.
- Not dry running