

Auto Bilge Pump Installation Instructions

PUMP MOUNTING INSTRUCTIONS

WARNING: Remove the pump mounting base (See Figure 3)

Remove the foam block that supports the float during shipping.

Failure to do this prevents the pump from starting when water is present.

Step 1: Press the hasps on both sides of the auto bilge pump, and remove the filter away from the bottom of the pump.

NOTE: Before connecting or operating the pump, install the filter correctly. It is strictly prohibited to disconnect the filter when the pump is running.

The pump must be installed above the water level.

Step 2: Ensure the best place when installing the pump. If you only use one pump, it is usually installed in the deepest place of the water level when the boat stops. You must install complete tubes for draining water. Drain all seepers by horizontal installation of water pipes, or placing the pump in a higher position.

Step 3: Install the strainer

A: When fixing the strainer on wood block, use \varnothing 4.0mm stainless steel self-tapping screws.

B: If you fix the strainer to a metal or glass fiber, firstly install a piece of wood on it, then fix the strainer to the piece of wood, then install the pump in the filter, and ensure that the two hasps fastened.