


Introduction

The STM32 Nucleo-64 board (NUCLEO-F030R8, NUCLEO-F070RB, NUCLEO-F072RB, NUCLEO-F091RC, NUCLEO-F103RB, NUCLEO-F302R8, NUCLEO-F303RE, NUCLEO-F334R8, NUCLEO-F401RE, NUCLEO-F410RB, NUCLEO-F411RE, NUCLEO-F446RE, NUCLEO-L053R8, NUCLEO-L073RZ, NUCLEO-L152RE, NUCLEO-L476RG) provides an affordable and flexible way for users to try out new concepts and build prototypes with the STM32 microcontrollers in LQFP64 package, choosing from the various combinations of performance, power consumption and features. The Arduino™ connectivity support and ST morpho headers make it easy to expand the functionality of the Nucleo open development platform with a wide choice of specialized shields. The STM32 Nucleo board does not require any separate probe as it integrates the ST-LINK/V2-1 debugger/programmer. The STM32 Nucleo board comes with the STM32 comprehensive software HAL library together with various packaged software examples, as well as direct access to mbed™ online resources at <http://mbed.org/>.

Figure 1. STM32 Nucleo-64 board ⁽¹⁾

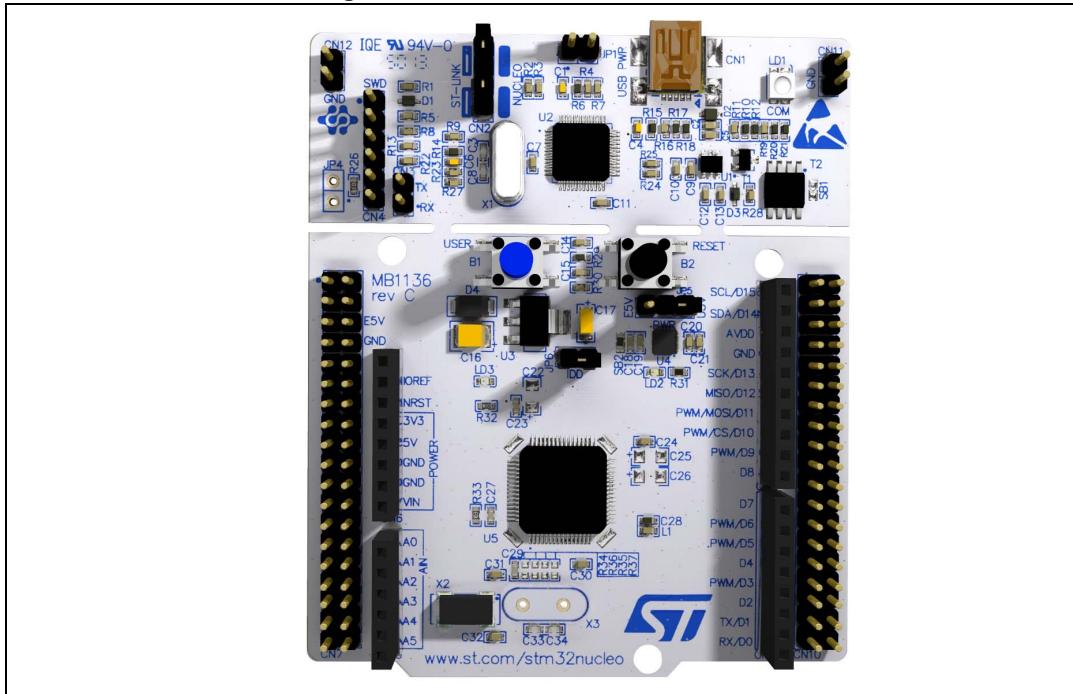

1. Picture not contractual.



Content

| | | |
|----------|---|-----------|
| 1 | Product marking | 6 |
| 2 | Ordering information | 7 |
| 3 | Conventions | 8 |
| 4 | Quick start | 9 |
| 4.1 | Getting started | 9 |
| 4.2 | System requirements | 9 |
| 4.3 | NUCLEO-L476RG bootloader limitations | 9 |
| 5 | Features | 11 |
| 5.1 | Hardware configuration variants | 11 |
| 6 | Hardware layout and configuration | 12 |
| 6.1 | Cuttable PCB | 14 |
| 6.2 | Embedded ST-LINK/V2-1 | 15 |
| 6.2.1 | Driver | 16 |
| 6.2.2 | ST-LINK/V2-1 firmware upgrade | 16 |
| 6.2.3 | Using the ST-LINK/V2-1 to program and debug the STM32 on board | 17 |
| 6.2.4 | Using ST-LINK/V2-1 to program and debug an external STM32 application | 17 |
| 6.3 | Power supply and power selection | 19 |
| 6.3.1 | Power supply input from the USB connector | 19 |
| 6.3.2 | External power supply inputs: VIN and E5V | 20 |
| 6.3.3 | External power supply input: + 3V3 | 21 |
| 6.3.4 | External power supply output | 21 |
| 6.4 | LEDs | 22 |
| 6.5 | Push buttons | 22 |
| 6.6 | JP6 (IDD) | 22 |
| 6.7 | OSC clock | 23 |
| 6.7.1 | OSC clock supply | 23 |
| 6.7.2 | OSC 32 KHz clock supply | 24 |
| 6.8 | USART communication | 24 |

| | | |
|----------|------------------------------------|-----------|
| 6.9 | Solder bridges | 25 |
| 6.10 | Extension connectors | 26 |
| 6.11 | Arduino connectors | 35 |
| 6.12 | ST morpho connector | 50 |
| 7 | Mechanical dimensions | 59 |
| 8 | Electrical schematics | 60 |
| 9 | Revision history | 64 |

List of Tables

| | | |
|-----------|--|----|
| Table 1. | Ordering information | 7 |
| Table 2. | ON/OFF conventions | 8 |
| Table 3. | Jumper states | 15 |
| Table 4. | Debug connector CN4 (SWD) | 18 |
| Table 5. | JP1 configuration table | 19 |
| Table 6. | External power sources | 20 |
| Table 7. | Power-related jumper | 20 |
| Table 8. | +3.3V external power source | 21 |
| Table 9. | Solder bridges | 25 |
| Table 10. | Arduino connectors on NUCLEO-F030R8, NUCLEO-F070RB, NUCLEO-F072RB, NUCLEO-F091RC | 35 |
| Table 11. | Arduino connectors on NUCLEO-F103RB | 37 |
| Table 12. | Arduino connectors on NUCLEO-F302R8 | 38 |
| Table 13. | Arduino connectors on NUCLEO-F303RE | 39 |
| Table 14. | Arduino connectors on NUCLEO-F334R8 | 40 |
| Table 15. | Arduino connectors on NUCLEO-F401RE and NUCLEO-F411RE | 41 |
| Table 16. | Arduino connectors on NUCLEO-L053R8 | 43 |
| Table 17. | Arduino connectors on NUCLEO-L073RZ | 44 |
| Table 18. | Arduino connectors on NUCLEO-F446RE | 45 |
| Table 19. | Arduino connectors on NUCLEO-F410RB | 47 |
| Table 20. | Arduino connectors on NUCLEO-L152RE | 48 |
| Table 21. | Arduino connectors on NUCLEO-L476RG | 49 |
| Table 22. | ST morpho connector on NUCLEO-F030R8 | 50 |
| Table 23. | ST morpho connector on NUCLEO-F070RB | 51 |
| Table 24. | ST morpho connector on NUCLEO-F072RB, NUCLEO-F091RC, NUCLEO-F303RE, NUCLEO-F334R8 | 52 |
| Table 25. | ST morpho connector on NUCLEO-F103RB | 52 |
| Table 26. | ST morpho connector on NUCLEO-F302R8 | 54 |
| Table 27. | ST morpho connector on NUCLEO-F401RE, NUCLEO-F411RE, NUCLEO-F446RE | 55 |
| Table 28. | ST morpho connector on NUCLEO-L053R8, NUCLEO-L073RZ, NUCLEO-L152RE | 56 |
| Table 29. | ST morpho connector on NUCLEO-L476RG | 57 |
| Table 30. | ST morpho connector on NUCLEO-F410RB | 58 |
| Table 31. | Document revision history | 64 |

List of Figures

| | | |
|------------|--|----|
| Figure 1. | STM32 Nucleo-64 board ⁽¹⁾ | 1 |
| Figure 2. | Hardware block diagram | 12 |
| Figure 3. | Top layout | 13 |
| Figure 4. | Bottom layout | 14 |
| Figure 5. | Typical configuration | 16 |
| Figure 6. | Updating the list of drivers in Device Manager | 16 |
| Figure 7. | Connecting the STM32 Nucleo board to program the on-board STM32 | 17 |
| Figure 8. | Using ST-LINK/V2-1 to program the STM32 on an external application | 18 |
| Figure 9. | NUCLEO-F030R8 | 27 |
| Figure 10. | NUCLEO-F070RB | 27 |
| Figure 11. | NUCLEO-F072RB | 28 |
| Figure 12. | NUCLEO-F091RC | 28 |
| Figure 13. | NUCLEO-F103RB | 29 |
| Figure 14. | NUCLEO-F302R8 | 29 |
| Figure 15. | NUCLEO-F303RE | 30 |
| Figure 16. | NUCLEO-F334R8 | 30 |
| Figure 17. | NUCLEO-F401RE | 31 |
| Figure 18. | NUCLEO-F411RE | 31 |
| Figure 19. | NUCLEO-L053R8 | 32 |
| Figure 20. | NUCLEO-L073RZ | 32 |
| Figure 21. | NUCLEO-L152RE | 33 |
| Figure 22. | NUCLEO-L476RG | 33 |
| Figure 23. | NUCLEO-F446RE | 34 |
| Figure 24. | NUCLEO-F410RB | 34 |
| Figure 25. | STM32 Nucleo board mechanical dimensions | 59 |
| Figure 26. | Top and Power(1/4) | 60 |
| Figure 27. | MCU (2/4) | 61 |
| Figure 28. | ST-LINK/V2-1 (3/4) | 62 |
| Figure 29. | Extension connectors (4/4) | 63 |

1 Product marking

Evaluation tools marked as "ES" or "E" are not yet qualified and therefore they are not ready to be used as reference design or in production. Any consequences deriving from such usage will not be at ST charge. In no event, ST will be liable for any customer usage of these engineering sample tools as reference design or in production.

"E" or "ES" marking examples of location:

- On the targeted STM32 that is soldered on the board (for illustration of STM32 marking, refer to the section "Package information" of the STM32 datasheet available at www.st.com).
- Next to the evaluation tool ordering part number, that is stuck or silk-screen printed on the board.

2 Ordering information

Table 1 lists the order codes and the respective targeted MCU.

Table 1. Ordering information

| Order code | Targeted MCU |
|---------------|---------------|
| NUCLEO-F030R8 | STM32F030R8T6 |
| NUCLEO-F070RB | STM32F070RBT6 |
| NUCLEO-F072RB | STM32F072RBT6 |
| NUCLEO-F091RC | STM32F091RCT6 |
| NUCLEO-F103RB | STM32F103RBT6 |
| NUCLEO-F302R8 | STM32F302R8T6 |
| NUCLEO-F303RE | STM32F303RET6 |
| NUCLEO-F334R8 | STM32F334R8T6 |
| NUCLEO-F401RE | STM32F401RET6 |
| NUCLEO-F410RB | STM32F410RBT6 |
| NUCLEO-F411RE | STM32F411RET6 |
| NUCLEO-F446RE | STM32F446RET6 |
| NUCLEO-L053R8 | STM32L053R8T6 |
| NUCLEO-L073RZ | STM32L073RZT6 |
| NUCLEO-L152RE | STM32L152RET6 |
| NUCLEO-L476RG | STM32L476RGT6 |

The meaning of NUCLEO-TXXXRY codification is as follows:

- TXXX describes the STM32 MCU product line (T for F or L)
- R describes the pin count (R for 64 pins)
- Y describes the code size (8 for 64K, B for 128K, C for 256K, E for 512K, G for 1MB, Z for 192K)

The last six characters (e.g.: L073RZK6) of this order code, is printed on a sticker placed at the top or bottom side of the board.

3 Conventions

Table 2 provides the conventions used for the ON and OFF settings in the present document.

Table 2. ON/OFF conventions

| Convention | Definition |
|-----------------------|--|
| Jumper JP1 ON | Jumper fitted |
| Jumper JP1 OFF | Jumper not fitted |
| Solder bridge SBx ON | SBx connections closed by solder or 0 ohm resistor |
| Solder bridge SBx OFF | SBx connections left open |

In this document the references are “STM32 Nucleo board” and “STM32 Nucleo boards” for all information that is common to all sale types.

4 Quick start

The STM32 Nucleo board is a low-cost and easy-to-use development platform used to quickly evaluate and start a development with an STM32 microcontroller in LQFP64 package.

Before installing and using the product, accept the Evaluation Product License Agreement from the www.st.com/epla webpage.

For more information on the STM32 Nucleo boards and to access the demonstration software, visit www.st.com/stm32nucleo website.

4.1 Getting started

Follow the sequence below to configure the STM32 Nucleo board and launch the demo software:

1. Check the jumper position on the board, JP1 off, JP5 (PWR) on U5V, JP6 on (IDD), CN2 on (NUCLEO) selected.
2. For correct identification of all device interfaces from the host PC, install the Nucleo USB driver available from the www.st.com/stm32nucleo webpage, prior to connecting the board.
3. Connect the STM32 Nucleo board to a PC with a USB cable ‘type A to mini-B’ through USB connector CN1 to power the board. The red LED LD3 (PWR) and LD1 (COM) should light up. LD1 (COM) and green LED LD2 should blink.
4. Press button B1 (left button).
5. Observe the blinking frequency of the three LEDs LD1 to LD3, by clicking on the button B1.
6. The demo software and several software examples on how use the STM32 Nucleo board features are available from the www.st.com/stm32nucleo webpage.
7. Develop the application using the available examples.

4.2 System requirements

- Windows® OS (XP, 7, 8)
- USB type A to Mini-B USB cable

4.3 NUCLEO-L476RG bootloader limitations

Boot from system Flash memory results in executing **bootloader** code stored in the system Flash memory, protected against write and erase. This allows in-system programming (ISP), that is, flashing the MCU user Flash memory. It also allows writing data into RAM. The data come in via one of the communication interfaces such as USART, SPI, I²C bus, USB or CAN.

Bootloader version can be identified by reading Bootloader ID at the address 0x1FFF6FFE.

The STM32L476RGT6 part soldered on the NUCLEO-L476RG main board is marked with a date code, corresponding to its date of manufacturing. STM32L476RGT6 parts with the date

code prior or equal to week 22 of 2015 are fitted with **bootloader V 9.0**, affected by the limitations to be worked around, as described hereunder. Parts with the date code starting from week 23 of 2015 contain bootloader V 9.2 in which the limitations no longer exist.

To locate the visual date code information on the STM32L476RG-T6 package, refer to the section "Package information" of the datasheet (DS10198) available at www.st.com. Date code related portion of the package marking, takes Y WW format, where Y is the last digit of the year and WW is the week. For example, a part manufactured in week 23 of 2015 bares the date code 5 23.

Bootloader ID of the bootloader V 9.0 is 0x90.

The following limitations exist in the bootloader V 9.0:

1. RAM data get corrupted when written via USART/SPI/I2C/USB interface

Description:

1. Data write operation into RAM space via USART, SPI, I²C bus or USB results in wrong or no data written.

Workaround:

1. To correct the issue of wrong write into RAM, download STSW-STM32158 bootloader V 9.0 patch package from the www.st.com website and load "Bootloader V9.0 SRAM patch" to the MCU, following the information in readme.txt file available in the package.

1. User Flash memory data get corrupted when written via CAN interface

Description:

1. Data write operation into user Flash memory space via CAN interface results in wrong or no data written.

Workaround:

To correct the issue of wrong write into Flash memory, download STSW-STM32158 bootloader V 0.9 patch package from the www.st.com website and load "Bootloader V9.0 CAN patch" to the MCU, following the information in readme.txt file available in the package.

5 Features

The STM32 Nucleo boards offer the following features:

- STM32 microcontroller with LQFP64 package
- Two types of extension resources
 - Arduino™ Uno Revision 3 connectivity
 - ST morpho extension pin headers for full access to all STM32 I/Os
- mbed™ -enabled^(a)
- On-board ST-LINK/V2-1 debugger/programmer with SWD connector
 - selection-mode switch to use the kit as a standalone ST-LINK/V2-1
- Flexible board power supply
 - USB VBUS
 - External VIN (7V<VIN<12V) supply voltage from Arduino connectors or ST morpho connector
 - External 5V (E5V) supply voltage from ST morpho connector
 - External +3.3V supply voltage from Arduino connector or ST morpho connector
- Three LEDs
 - USB communication (LD1), user LED (LD2), power LED (LD3)
- Two push buttons: USER and RESET
- LSE crystal:
 - 32.768KHz crystal oscillator (depending on board version)
- USB re-enumeration capability: three different interfaces supported on USB
 - Virtual Com port
 - Mass storage
 - Debug port
- Comprehensive free software HAL library including a variety of software examples
- Supported by wide choice of Integrated Development Environments (IDEs) including:
 - IAR EWARM (IAR Embedded Workbench®)
 - Keil®
 - GCC-based IDEs (free AC6: SW4STM32, Atollic® TrueSTUDIO®,...)

5.1 Hardware configuration variants

The board can be delivered with different configurations of the oscillator of the target MCU. For all the details concerning high speed oscillator configurations refer, to [Section 6.7.1](#). For all the details concerning low speed oscillator configurations refer to [Section 6.7.2](#).

a. See <http://mbed.org/>

6 Hardware layout and configuration

The STM32 Nucleo board is designed around the STM32 microcontrollers in a 64-pin LQFP package.

Figure 2 shows the connections between the STM32 and its peripherals (ST-LINK/V2-1, pushbutton, LED, Arduino connectors and ST morpho connector).

Figure 3 and *Figure 4* show the location of these features on the STM32 Nucleo board.

Figure 2. Hardware block diagram


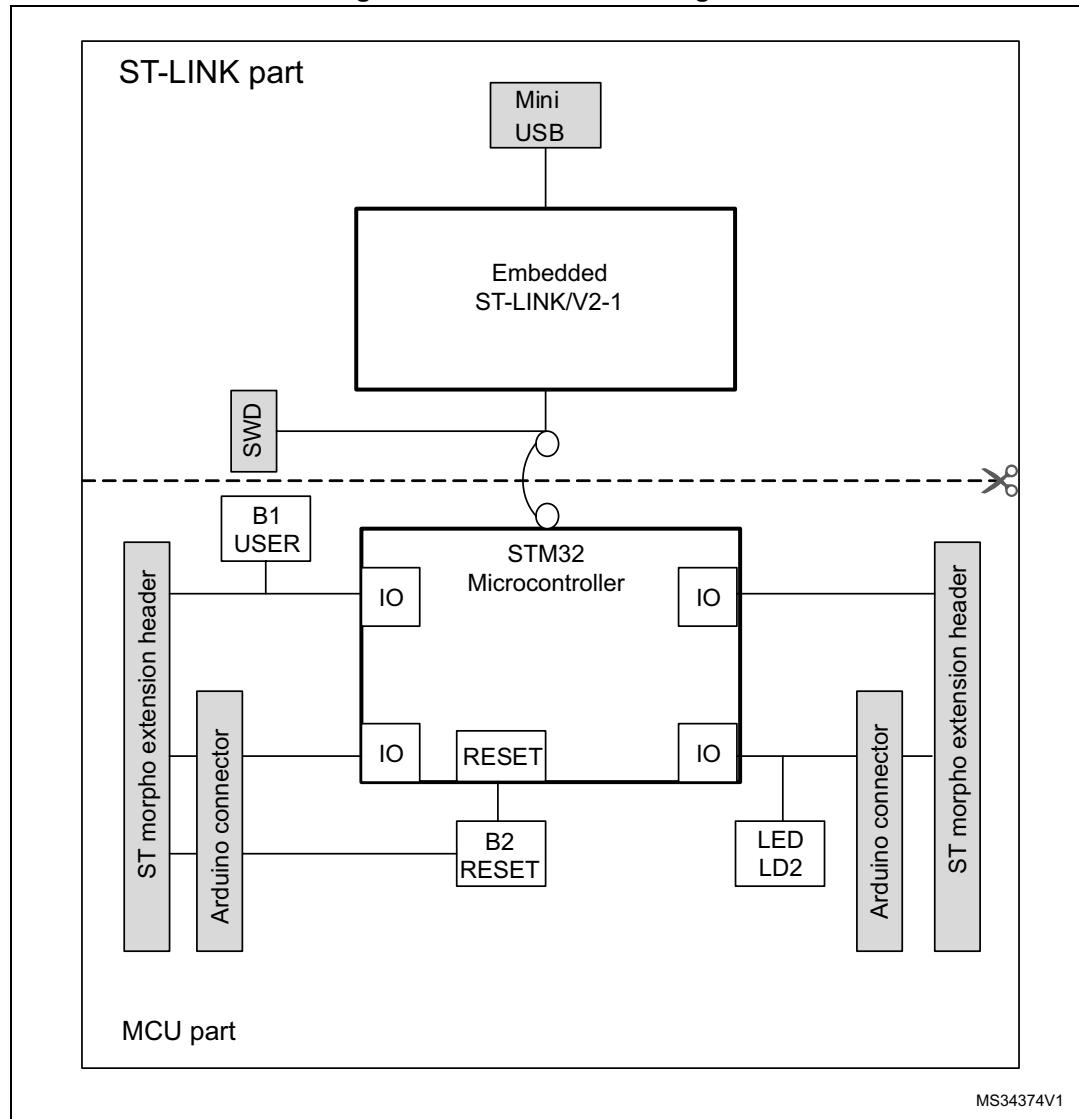



Figure 3. Top layout

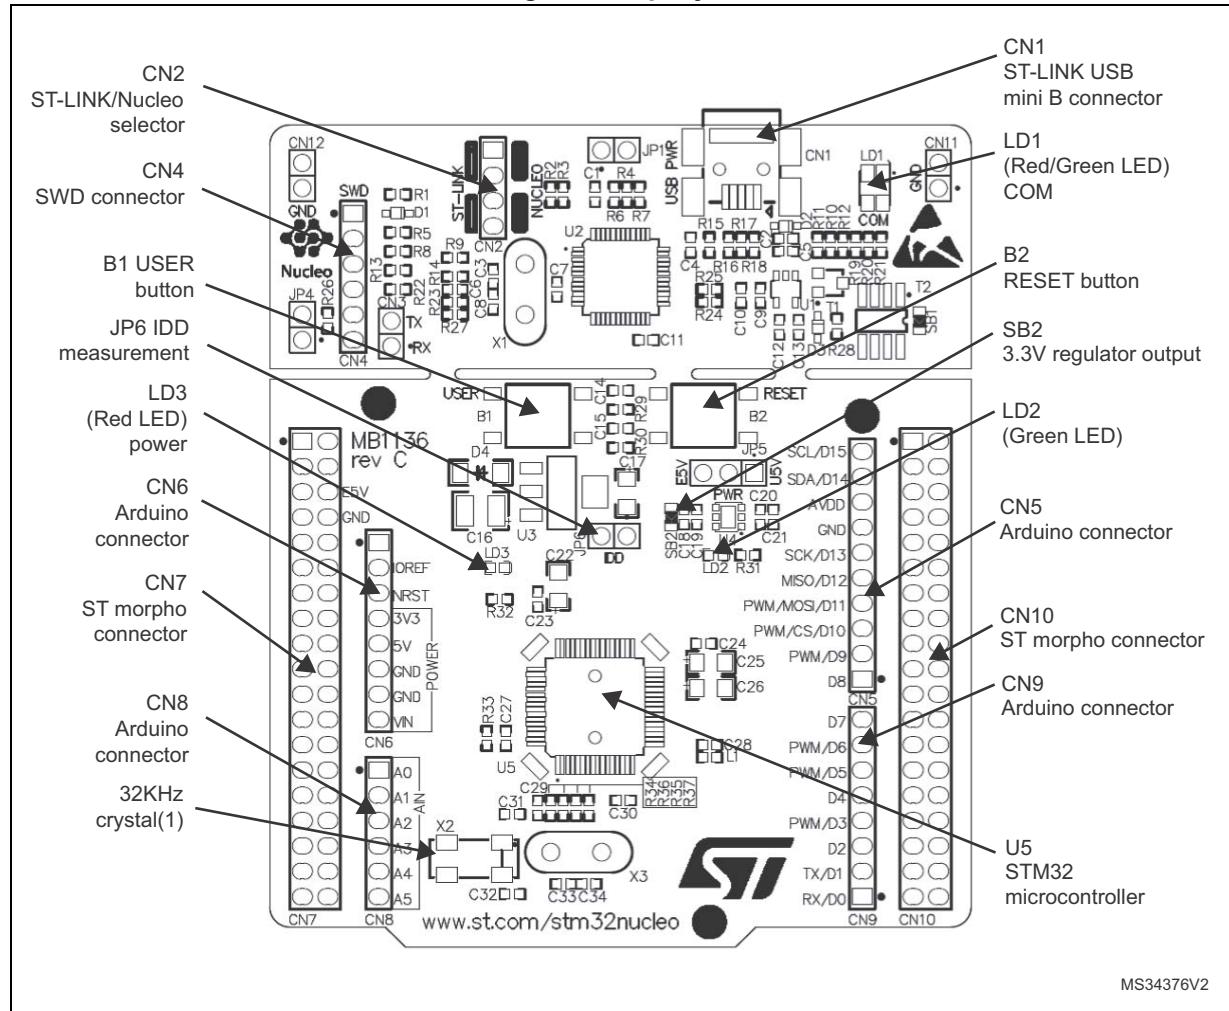

MS34376V2

1. Crystal may be present or not depending on board version, refer to [Section 6.7.2](#)

Figure 4. Bottom layout

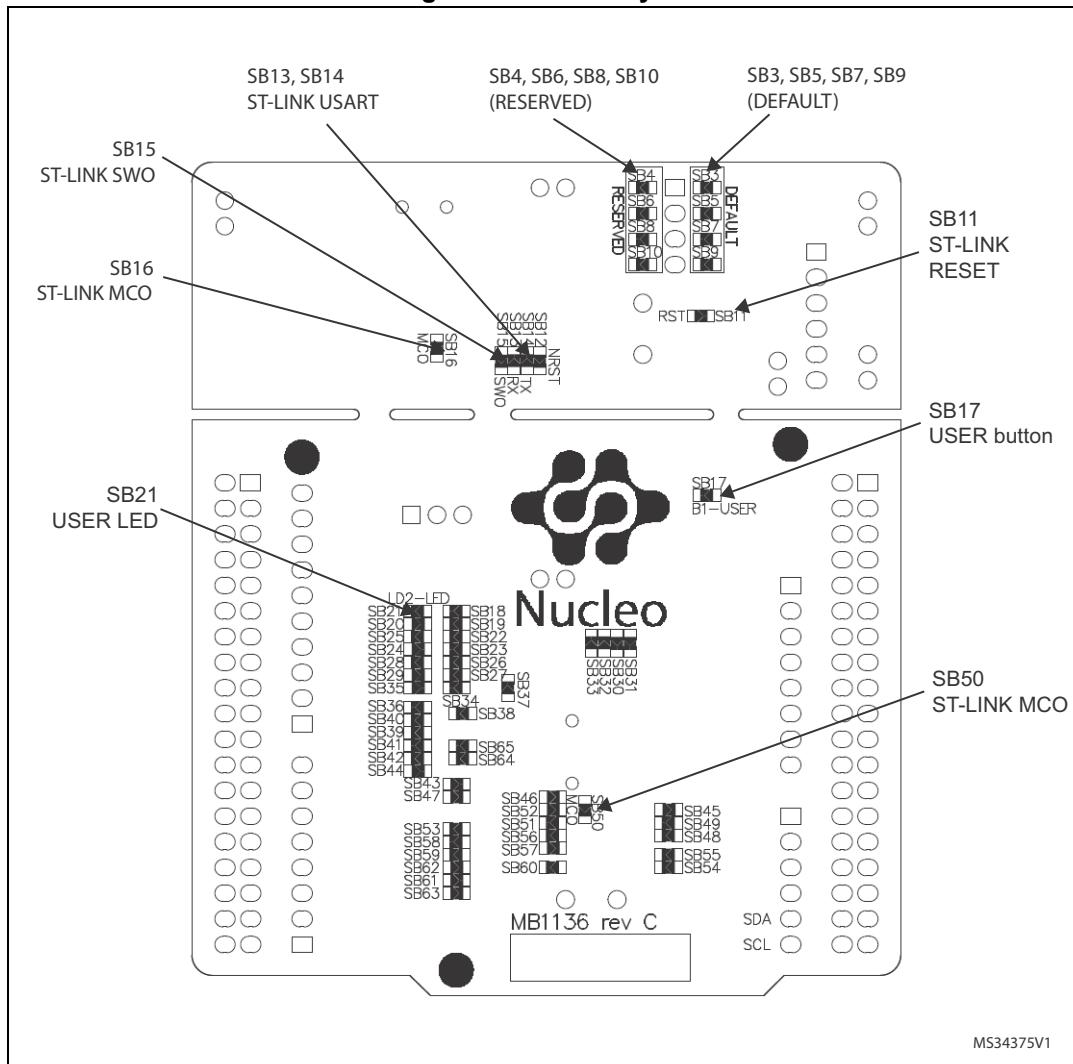

6.1 Cuttable PCB

The STM32 Nucleo board is divided into two parts: ST-LINK part and target MCU part. The ST-LINK part of the PCB can be cut out to reduce the board size. In this case the remaining target MCU part can only be powered by VIN, E5V and 3.3V on ST morpho connector CN7 or VIN and 3.3V on Arduino connector CN6. It is still possible to use the ST-LINK part to program the main MCU using wires between CN4 and SWD signals available on ST morpho connector (SWCLK CN7 pin 15 and SWDIO CN7 pin 13).

6.2 Embedded ST-LINK/V2-1

The ST-LINK/V2-1 programming and debugging tool is integrated in the STM32 Nucleo boards.

The ST-LINK/V2-1 makes the STM32 Nucleo boards mbed enabled.

The embedded ST-LINK/V2-1 supports only SWD for STM32 devices. For information about debugging and programming features refer to *ST-LINK/V2 in-circuit debugger/programmer for STM8 and STM32 User manual (UM1075)*, which describes in details all the ST-LINK/V2 features.

The changes versus ST-LINK/V2 version are listed below.


- New features supported on ST-LINK/V2-1:
 - USB software re-enumeration
 - Virtual com port interface on USB
 - Mass storage interface on USB
 - USB power management request for more than 100 mA power on USB
- Features not supported on ST-LINK/V2-1:
 - SWIM interface
 - Minimum supported application voltage limited to 3 V
- Known limitation:
 - Activating the readout protection on ST-LINK/V2-1 target prevents the target application from running afterwards. The target readout protection must be kept disabled on ST-LINK/V2-1 boards.

There are two different ways to use the embedded ST-LINK/V2-1 depending on the jumper states (see [Table 3](#) and [Figure 5](#)):

- Program/debug the MCU on board ([Section 6.2.2](#)),
- Program/debug an MCU in an external application board using a cable connected to SWD connector CN4 ([Section 6.2.4](#)).

Table 3. Jumper states

| Jumper state | Description |
|----------------------|---|
| Both CN2 jumpers ON | ST-LINK/V2-1 functions enabled for on board programming (default) |
| Both CN2 jumpers OFF | ST-LINK/V2-1 functions enabled for external CN4 connector (SWD supported) |

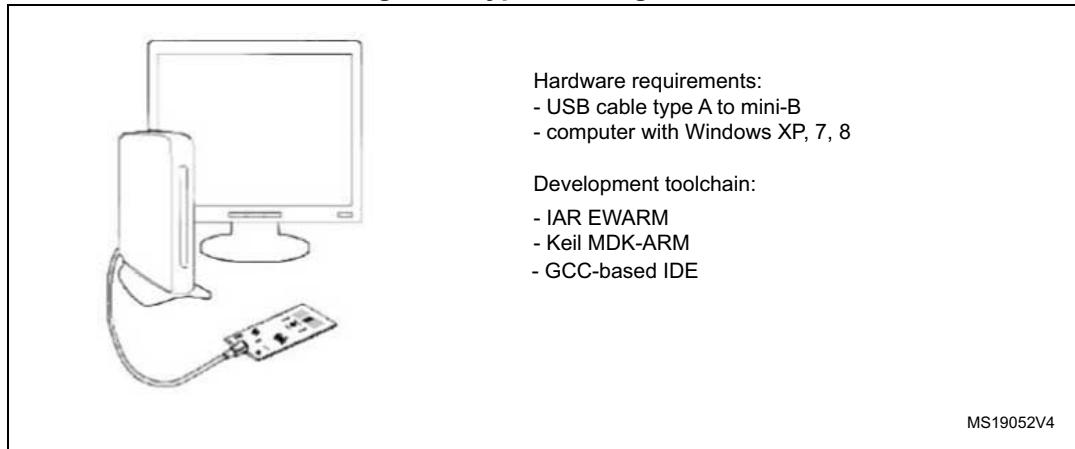
Figure 5. Typical configuration

6.2.1 Driver

The ST-LINK/V2-1 requires a dedicated USB driver, which can be found at www.st.com for Windows® XP, 7, 8.

In case the STM32 Nucleo board is connected to the PC before the driver is installed, some Nucleo interfaces may be declared as “Unknown” in the PC device manager. In this case the user must install the driver files (*Figure 6*), and from the device manager update the driver of the connected device.

Note: Prefer using the “USB Composite Device” handle for a full recovery.

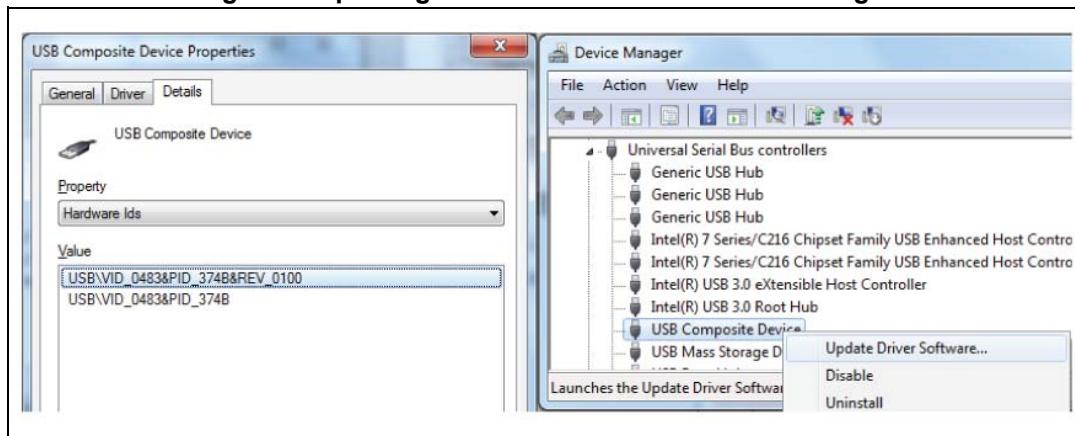Figure 6. Updating the list of drivers in Device Manager


6.2.2 ST-LINK/V2-1 firmware upgrade

The ST-LINK/V2-1 embeds a firmware upgrade mechanism for in-situ upgrade through the USB port. As the firmware may evolve during the life time of the ST-LINK/V2-1 product (for example new functionality, bug fixes, support for new microcontroller families), it is recommended to visit www.st.com website before starting to use the STM32 Nucleo board and periodically, in order to stay up-to-date with the latest firmware version.

6.2.3 Using the ST-LINK/V2-1 to program and debug the STM32 on board

To program the STM32 on the board, plug in the two jumpers on CN2, as shown in red in [Figure 7](#). Do not use the CN4 connector as this could disturb the communication with the STM32 microcontroller of the STM32 Nucleo board.

Figure 7. Connecting the STM32 Nucleo board to program the on-board STM32

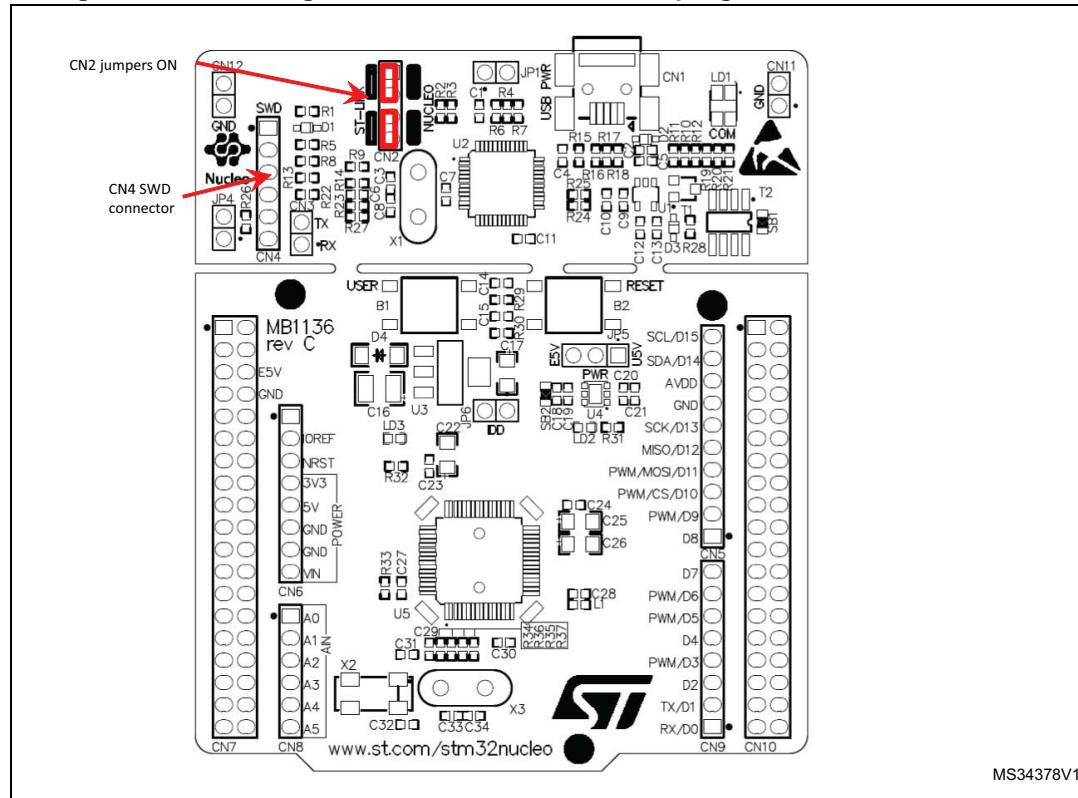

MS34378V1


6.2.4 Using ST-LINK/V2-1 to program and debug an external STM32 application

It is very easy to use the ST-LINK/V2-1 to program the STM32 on an external application. Simply remove the two jumpers from CN2 as illustrated in [Figure 8: Using ST-LINK/V2-1 to program the STM32 on an external application](#), and connect the application to the CN4 debug connector according to [Table 4](#).

Note: *SB12 NRST (target MCU RESET) must be OFF if CN4 pin 5 is used in the external application.*

Table 4. Debug connector CN4 (SWD)

| Pin | CN4 | Designation |
|-----|------------|-----------------------|
| 1 | VDD_TARGET | VDD from application |
| 2 | SWCLK | SWD clock |
| 3 | GND | Ground |
| 4 | SWDIO | SWD data input/output |
| 5 | NRST | RESET of target MCU |
| 6 | SWO | Reserved |

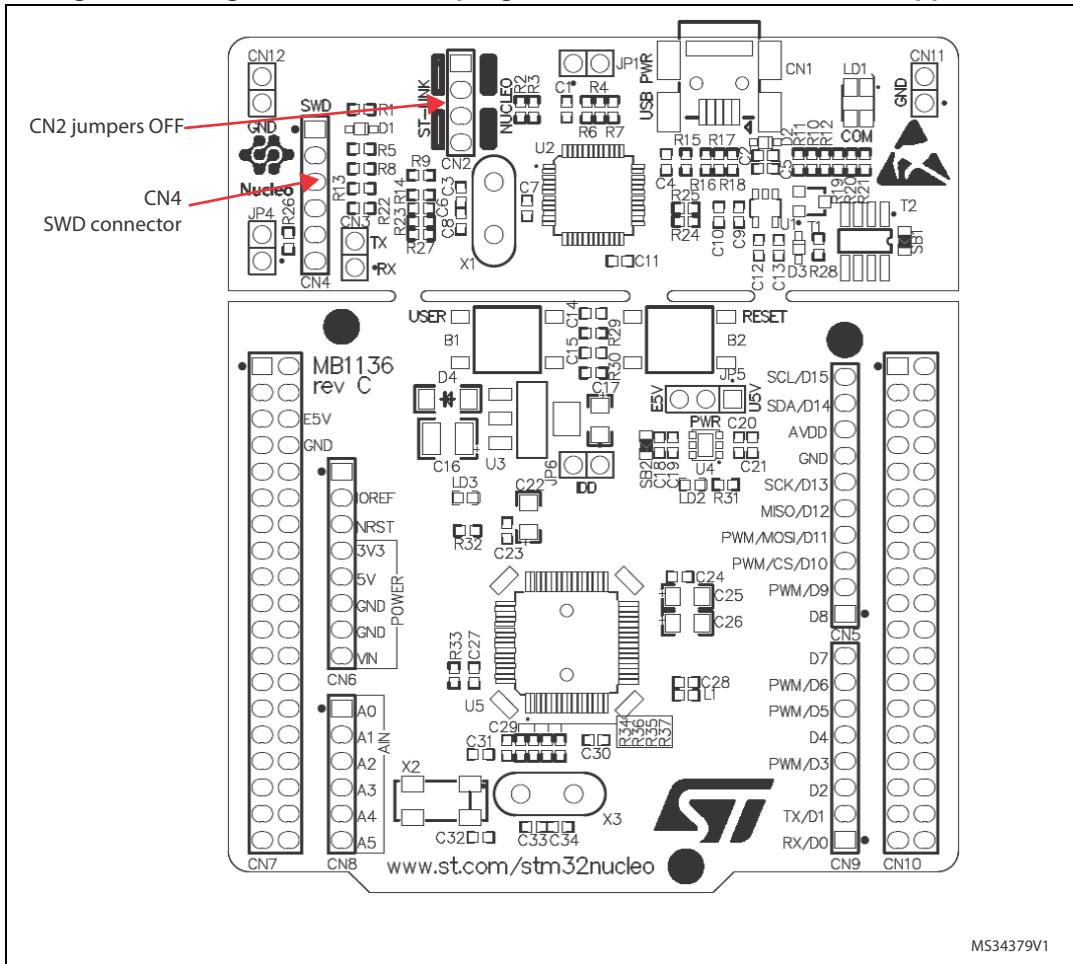Figure 8. Using ST-LINK/V2-1 to program the STM32 on an external application

6.3 Power supply and power selection

The power supply is provided either by the host PC through the USB cable, or by an external Source: VIN (7V-12V), E5V (5V) or +3V3 power supply pins on CN6 or CN7. In case VIN, E5V or +3V3 is used to power the Nucleo board, using an external power supply unit or an auxiliary equipment, this power source must comply with the standard EN-60950-1: 2006+A11/2009, and must be Safety Extra Low Voltage (SELV) with limited power capability.

6.3.1 Power supply input from the USB connector

The ST-LINK/V2-1 supports USB power management allowing to request more than 100 mA current to the host PC.

All parts of the STM32 Nucleo board and shield can be powered from the ST-LINK USB connector CN1 (U5V or VBUS). Note that only the ST-LINK part is power supplied before the USB enumeration as the host PC only provides 100 mA to the board at that time. During the USB enumeration, the STM32 Nucleo board requires 300 mA of current to the host PC. If the host is able to provide the required power, the targeted STM32 microcontroller is powered and the red LED LD3 is turned ON, thus the STM32 Nucleo board and its shield can consume a maximum of 300 mA current, not more. If the host is not able to provide the required current, the targeted STM32 microcontroller and the MCU part including the extension board are not power supplied. As a consequence the red LED LD3 remains turned OFF. In such case it is mandatory to use an external power supply as explained in the next [Section 6.3.2: External power supply inputs: VIN and E5V](#).

When the board is power supplied by USB (U5V) a jumper must be connected between pin 1 and pin 2 of JP5 as shown in [Table 7](#).

JP1 is configured according to the maximum current consumption of the board when powered by USB (U5V). JP1 jumper can be set in case the board is powered by USB and maximum current consumption on U5V does not exceed 100 mA (including an eventual extension board or Arduino shield). In such condition USB enumeration will always succeed since no more than 100mA is requested to the PC. Possible configurations of JP1 are summarized in [Table 5](#).

Table 5. JP1 configuration table

| Jumper state | Power supply | Allowed current |
|----------------|-----------------------|-----------------|
| JP1 jumper OFF | USB power through CN1 | 300 mA max |
| JP1 jumper ON | | 100 mA max |

Warning: **If the maximum current consumption of the NUCLEO and its extension boards exceeds 300 mA, it is mandatory to power the NUCLEO using an external power supply connected to E5V or VIN.**

Note: *In case the board is powered by an USB charger, there is no USB enumeration, so the led LD3 remains set to OFF permanently and the target MCU is not powered. In this specific case the jumper JP1 needs to be set to ON, to allow target MCU to be powered anyway.*

6.3.2 External power supply inputs: VIN and E5V



The external power sources VIN and E5V are summarized in the [Table 6](#). When the board is power supplied by VIN or E5V, the jumpers configuration must be the following:

- Jumper on JP5 pin 2 and pin 3
- Jumper removed on JP1

Table 6. External power sources

| Input power name | Connectors pins | Voltage range | Max current | Limitation |
|------------------|-------------------------|------------------|-------------|--|
| VIN | CN6 pin 8 CN7 pin 24 | 7 V to 12 V | 800 mA | From 7 V to 12 V only and input current capability is linked to input voltage: 800 mA input current when Vin=7 V 450 mA input current when 7 V<Vin (< or =) 9 V 250 mA input current when 9 V<Vin (< or =) 12 V |
| E5V | CN7 pin 6 | 4.75 V to 5.25 V | 500 mA | - |

Table 7. Power-related jumper
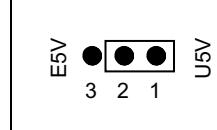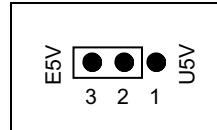
| Jumper | Description |
|--------|--|
| JP5 | U5V (ST-LINK VBUS) is used as power source when JP5 is set as shown below (Default setting) |
| |  VIN or E5V is used as power source when JP5 is set as shown below.  |

Using VIN or E5V as external power supply

VIN or E5V can be used as external power supply in case the current consumption of NUCLEO and extensions boards exceeds the allowed current on USB. In this condition it is still possible to use the USB for communication, for programming or debugging only, but it is mandatory to power supply the board first using VIN or E5V then connect the USB cable to the PC. Proceeding this way ensures that the enumeration occurs thanks to the external power source.

The following power sequence procedure must be respected:

1. Connect the jumper between pin 2 and pin 3 of JP5
2. Check that JP1 is removed
3. Connect the external power source to VIN or E5V
4. Power on the external power supply $7 \text{ V} < \text{VIN} < 12 \text{ V}$ to VIN, or 5 V for E5V
5. Check that LD3 is turned ON
6. Connect the PC to USB connector CN1

If this order is not respected, the board may be supplied by VBUS first then by VIN or E5V, and the following risks may be encountered:

1. If more than 300 mA current is needed by the board, the PC may be damaged or the current supply can be limited by the PC. As a consequence the board is not powered correctly.
2. 300 mA is requested at enumeration (since JP1 must be OFF) so there is risk that the request is rejected and the enumeration does not succeed if the PC cannot provide such current. Consequently the board is not power supplied (LED LD3 remains OFF).

6.3.3 External power supply input: + 3V3

It can be of interest to use the +3V3 (CN6 pin 4 or CN7 pin 12 and pin 16) directly as power input for instance in case the 3.3 V is provided by an extension board. When the Nucleo board is power supplied by +3V3, the ST-LINK is not powered thus the programming and debug features are unavailable. The external power sources +3.3V is summarized in the [Table 8](#).

Table 8. +3.3V external power source

| Input power name | Connectors pins | Voltage range | Limitation |
|------------------|------------------------------------|---------------|--|
| +3V3 | CN6 pin 4 CN7 pin 12 and pin 16 | 3 V to 3.6 V | Used when ST-LINK part of PCB is cut or SB2 and SB12 OFF |

Two different configurations are possible when using +3V3 to power the board:

- ST-LINK is removed (PCB cut), or
- SB2 (3V3 regulator) and SB12 (NRST) are OFF.

6.3.4 External power supply output

When powered by USB, VIN or E5V, the +5V (CN6 pin 5 or CN7 pin 18) can be used as output power supply for an Arduino shield or an extension board. In this case, the maximum current of the power source specified in [Table 6](#) needs to be respected.

The +3.3 V (CN6 pin 4 or CN7 pin 12 and 16) can be used also as power supply output. The current is limited by the maximum current capability of the regulator U4 (500 mA max).

6.4 LEDs

The tricolor LED (green, orange, red) LD1 (COM) provides information about ST-LINK communication status. LD1 default color is red. LD1 turns to green to indicate that communication is in progress between the PC and the ST-LINK/V2-1, with the following setup:

- Slow blinking Red/Off: at power-on before USB initialization
- Fast blinking Red/Off: after the first correct communication between the PC and ST-LINK/V2-1 (enumeration)
- Red LED On: when the initialization between the PC and ST-LINK/V2-1 is complete
- Green LED On: after a successful target communication initialization
- Blinking Red/Green: during communication with target
- Green On: communication finished and successful
- Orange On: Communication failure

User LD2: the green LED is a user LED connected to Arduino signal D13 corresponding to MCU I/O PA5 (pin 21) or PB13 (pin 34) depending on the STM32 target. Refer to [Table 10](#) to [Table 21](#) when:

- the I/O is HIGH value, the LED is on
- the I/O is LOW, the LED is off

LD3 PWR: the red LED indicates that the MCU part is powered and +5V power is available.

6.5 Push buttons

B1 USER: the user button is connected to the I/O PC13 (pin 2) of the STM32 microcontroller.

B2 RESET: this push button is connected to NRST, and is used to RESET the STM32 microcontroller.

Note: *The blue and black plastic hats that are placed on the push buttons can be removed if necessary, for example when a shield or when an application board is plugged on top of the Nucleo board. This will avoid pressure on the buttons and consequently a possible permanent target MCU RESET.*

6.6 JP6 (IDD)

Jumper JP6, labeled IDD, is used to measure the STM32 microcontroller consumption by removing the jumper and by connecting an ammeter:

- Jumper ON: STM32 microcontroller is powered (default).
- Jumper OFF: an ammeter must be connected to measure the STM32 microcontroller current. If there is no ammeter, STM32 microcontroller is not powered.

6.7 OSC clock

6.7.1 OSC clock supply

There are four ways to configure the pins corresponding to external high-speed clock (HSE):

- **MCO from ST-LINK:** MCO output of ST-LINK MCU is used as input clock. This frequency cannot be changed, it is fixed at 8 MHz and connected to PF0/PD0/PH0-OSC_IN of the STM32 microcontroller.
The following configuration is needed:
 - SB55 OFF and SB54 ON
 - SB16 and SB50 ON
 - R35 and R37 removed
- **HSE oscillator on-board from X3 crystal (not provided):** for typical frequencies and its capacitors and resistors, refer to STM32 microcontroller datasheet. Refer to the AN2867 Application note for oscillator design guide for STM32 microcontrollers. The X3 crystal has the following characteristics: 8 MHz, 16 pF, 20 ppm, and DIP footprint. It is recommended to use 9SL8000016AFXHF0 manufactured by Hong Kong X'tals Limited.
The following configuration is needed:
 - SB54 and SB55 OFF
 - R35 and R37 soldered
 - C33 and C34 soldered with 20 pF capacitors
 - SB16 and SB50 OFF
- **Oscillator from external PF0/PD0/PH0:** from an external oscillator through pin 29 of the CN7 connector.
The following configuration is needed:
 - SB55 ON
 - SB50 OFF
 - R35 and R37 removed
- **HSE not used:** PF0/PD0/PH0 and PF1/PD1/PH1 are used as GPIO instead of clock
The following configuration is needed:
 - SB54 and SB55 ON
 - SB16 and SB50 (MCO) OFF
 - R35 and R37 removed

There are two possible default configurations of the HSE pins, depending on the version of the Nucleo board hardware.

The board version MB1136 C-01 or MB1136 C-02 is mentioned on the sticker, placed on the bottom side of the PCB.

The board marking MB1136 C-01 corresponds to a board, configured as HSE not used.

The board marking MB1136 C-02 (or higher) corresponds to a board, configured to use ST-LINK MCO as clock input.

Note: For NUCLEO-L476RG the ST-LINK MCO output is not connected to OSCIN to reduce power consumption in low power mode. Consequently NUCLEO-L476RG configuration corresponds to HSE not used.

6.7.2 OSC 32 KHz clock supply

There are three ways to configure the pins corresponding to low-speed clock (LSE):

- **On-board oscillator:** X2 crystal. Refer to the *Oscillator design guide for STM8S, STM8A and STM32 microcontrollers* application note (AN2867) for oscillator design guide for STM32 microcontrollers. It is recommended to use ABS25-32.768KHZ-6-T, manufactured by Abracon corporation.
- **Oscillator from external PC14:** from external oscillator through the pin 25 of CN7 connector.

The following configuration is needed:

- SB48 and SB49 ON
- R34 and R36 removed

- **LSE not used:** PC14 and PC15 are used as GPIOs instead of low speed clock.

The following configuration is needed:

- SB48 and SB49 ON
- R34 and R36 removed

There are three possible default configurations of the LSE depending on the version of the Nucleo board hardware.

The board version MB1136 C-01 or MB1136 C-02 is mentioned on the sticker placed on the bottom side of the PCB.

The board marking MB1136 C-01 corresponds to a board configured as LSE not used.

The board marking MB1136 C-02 (or higher) corresponds to a board configured with on-board 32KHz oscillator.

The board marking MB1136 C-03 (or higher) corresponds to a board using new LSE crystal (ABS25) and C26, C31 and C32 value update.

6.8 USART communication

The USART2 interface available on PA2 and PA3 of the STM32 microcontroller can be connected to ST-LINK MCU, ST morpho connector or to Arduino connector. The choice can be changed by setting the related solder bridges. By default the USART2 communication between the target MCU and ST-LINK MCU is enabled, in order to support Virtual Com Port for mbed (SB13 and SB14 ON, SB62 and SB63 OFF). If the communication between the target MCU PA2 (D1) or PA3 (D0) and shield or extension board is required, SB62 and SB63 should be ON, SB13 and SB14 should be OFF. In such case it is possible to connect another USART to ST-LINK MCU using flying wires between ST morpho connector and CN3. For instance on NUCLEO-F103RB it is possible to use USART3 available on PC10 (TX) and PC11 (RX). Two flying wires need to be connected as follow:

- PC10 (USART3_TX) available on CN7 pin 1 to CN3 pin RX
- PC11 (USART3_RX) available on CN7 pin 2 to CN3 pin TX

6.9 Solder bridges

Table 9. Solder bridges

| Bridge | State ⁽¹⁾ | Description |
|--|----------------------|---|
| SB54, SB55 (X3 crystal) ⁽²⁾ | OFF | X3, C33, C34, R35 and R37 provide a clock as shown in Section 8: Electrical schematics PF0/PD0/PH0, PF1/PD1/PH1 are disconnected from CN7. |
| | ON | PF0/PD0/PH0, PF1/PD1/PH1 are connected to CN12. (R35, R37 and SB50 must not be fitted). |
| SB3,5,7,9 (DEFAULT) | ON | Reserved, do not modify. |
| SB4,6,8,10 (RESERVED) | OFF | Reserved, do not modify. |
| SB48,49 (X2 crystal) ⁽³⁾ | OFF | X2, C31, C32, R34 and R36 deliver a 32 kHz clock. PC14, PC15 are not connected to CN7. |
| | ON | PC14, PC15 are only connected to CN7. Remove only R34, R36. |
| SB17 (B1-USER) | ON | B1 push button is connected to PC13. |
| | OFF | B1 push button is not connected to PC13. |
| SB12 (NRST) | ON | The NRST signal of the CN4 connector is connected to the NRST pin of the STM32 MCU. |
| | OFF | The NRST signal of the CN4 connector is not connected to the NRST pin of the STM MCU. |
| SB15 (SWO) | ON | The SWO signal of the CN4 connector is connected to PB3. |
| | OFF | The SWO signal is not connected. |
| SB11 (STM_RST) | OFF | No incidence on STM32F103CBT6 (ST-LINK MCU) NRST signal. |
| | ON | STM32F103CBT6 (ST-LINK MCU) NRST signal is connected to GND. |
| SB1 (USB-5V) | OFF | USB power management is functional. |
| | ON | USB power management is disabled. |
| SB2 (3.3 V) | ON | Output of voltage regulator LD39050PU33R is connected to 3.3V. |
| | OFF | Output of voltage regulator LD39050PU33R is not connected. |
| SB21 (LD2-LED) | ON | Green user LED LD2 is connected to D13 of Arduino signal. |
| | OFF | Green user LED LD2 is not connected. |
| SB56,SB51 (A4 and A5) | ON | PC1 and PC0 (ADC in) are connected to A4 and A5 (pin 5 and pin 6) on Arduino connector CN8 and ST morpho connector CN7. Thus SB46 and SB52 should be OFF. |
| | OFF | PC1 and PC0 (ADC in) are disconnected to A4 and A5 (pin 5 and pin 6) on Arduino connector CN8 and ST morpho connector CN7. |
| SB46,SB52 (I2C on A4 and A5) | OFF | PB9 and PB8 (I2C) are disconnected to A4 and A5 (pin 5 and pin 6) on Arduino connector CN8 and ST morpho connector CN7. |
| | ON | PB9 and PB8 (I2C) are connected to A4 and A5 (pin 5 and pin 6) on Arduino connector CN8 and ST morpho connector CN7 as I2C signals. Thus SB56 and SB51 should be OFF. |
| SB45 (VBAT/VLCD) | ON | VBAT or VLCD on STM32 MCU is connected to VDD. |
| | OFF | VBAT or VLCD on STM32 MCU is not connected to VDD. |

Table 9. Solder bridges (continued)

| Bridge | State ⁽¹⁾ | Description |
|-------------------------------|----------------------|---|
| SB57 (VDDA/VREF+) | ON | VDDA/VREF+ on STM32 MCU is connected to VDD. |
| | OFF | VDDA/VREF+ on STM32 MCU is not connected to VDD and can be provided from pin 7 of CN10 |
| SB62, SB63 (USART) | OFF | PA2 and PA3 on STM32 MCU are disconnected to D1 and D0 (pin 2 and pin 1) on Arduino connector CN9 and ST morpho connector CN10. |
| | ON | PA2 and PA3 on STM32 MCU are connected to D1 and D0 (pin 2 and pin 1) on Arduino connector CN9 and ST morpho connector CN10 as USART signals. Thus SB13 and SB14 should be OFF. |
| SB13, SB14 (ST-LINK-USART) | ON | PA2 and PA3 on STM32F103CBT6 (ST-LINK MCU) are connected to PA3 and PA2 on STM32 MCU to have USART communication between them. Thus SB61,SB62 and SB63 should be OFF. |
| | OFF | PA2 and PA3 on STM32F103CBT6 (ST-LINK MCU) are disconnected to PA3 and PA2 on STM32 MCU. |
| SB16,SB50(MCO) ⁽²⁾ | OFF | MCO on STM32F103CBT6 (ST-LINK MCU) are disconnected to PF0/PD0/PH0 on STM32 MCU. |
| | ON | MCO on STM32F103CBT6 (ST-LINK MCU) are connected to PF0/PD0/PH0 on STM32 MCU. |

1. The default SBx state is shown in bold.
2. Default configuration depends on board version. Refer to [Section 6.7.1: OSC clock supply](#) for details.
3. Default configuration depends on board version. Refer to [Section 6.7.2: OSC 32 KHz clock supply](#) for details.

All the other solder bridges present on the STM32 Nucleo board are used to configure several IOs and power supply pins for compatibility of features and pinout with STM32 MCU supported.

All STM32 Nucleo boards are delivered with the solder-bridges configured according to the target MCU supported.

6.10 Extension connectors

[Figure 9](#) to [Figure 24](#) show the signals connected by default to Arduino Uno Revision 3 connectors (CN5, CN6, CN8, CN9) and to ST morpho connector (CN7 and CN10), for each STM32 Nucleo board.

Figure 9. NUCLEO-F030R8

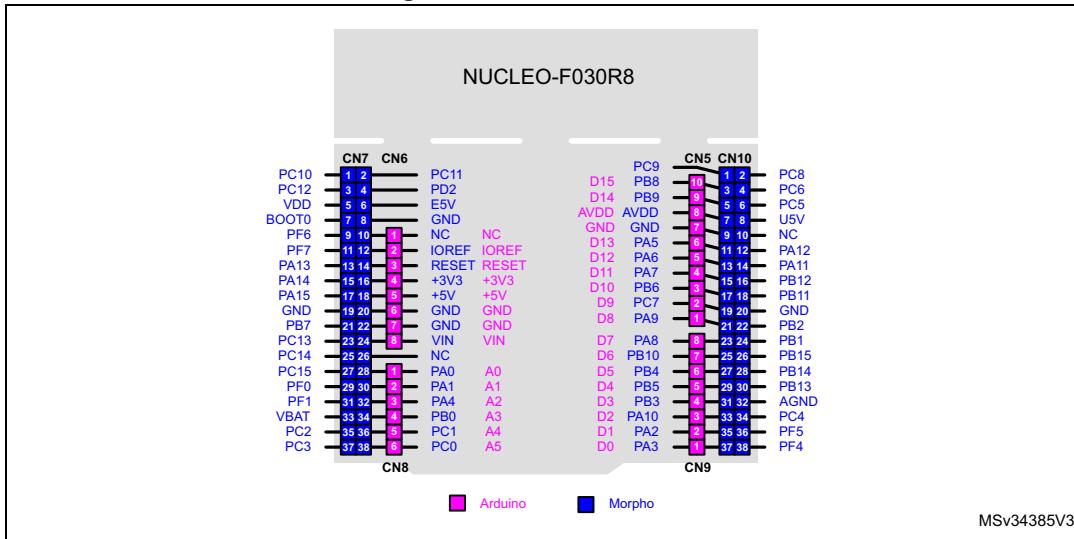


Figure 10. NUCLEO-F070RB

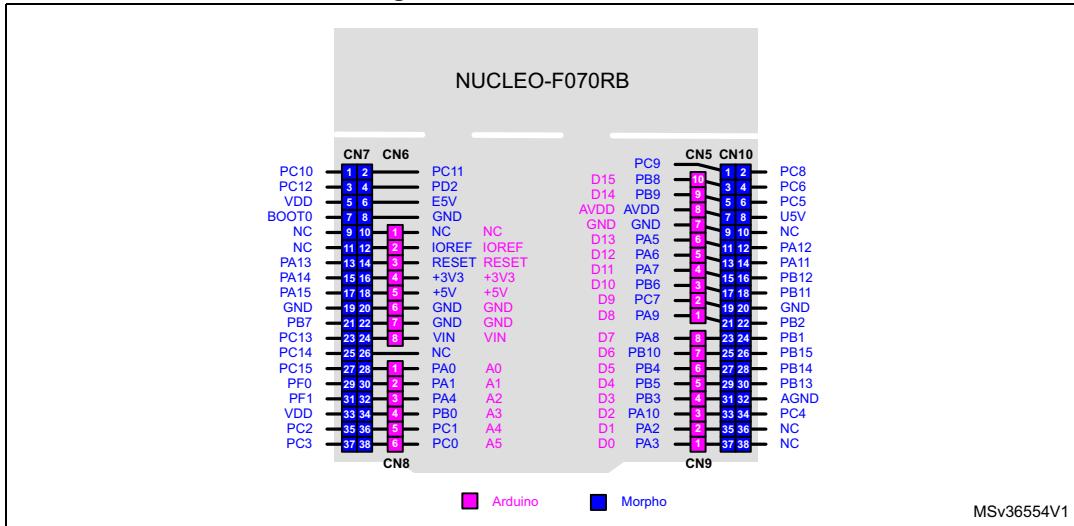


Figure 11. NUCLEO-F072RB

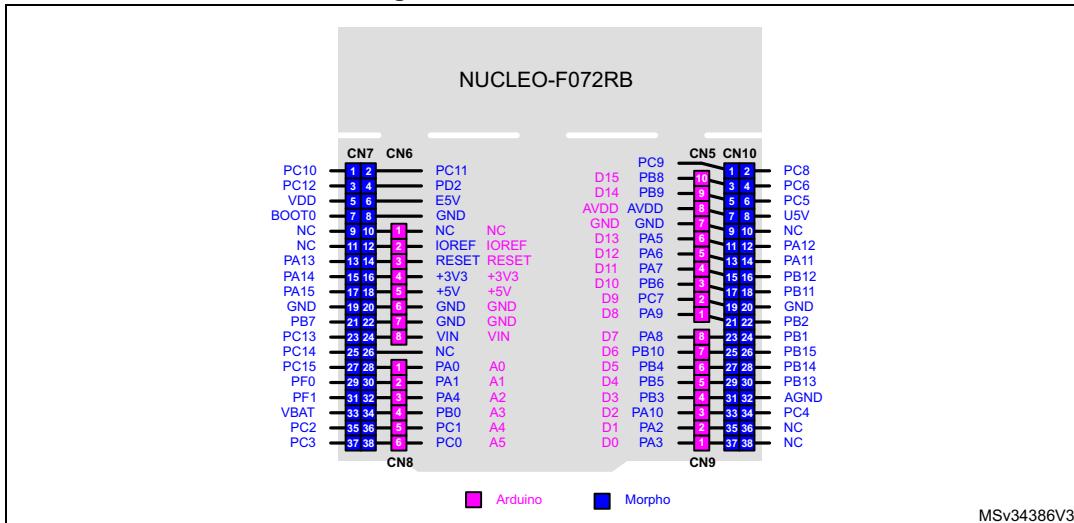


Figure 12. NUCLEO-F091RC

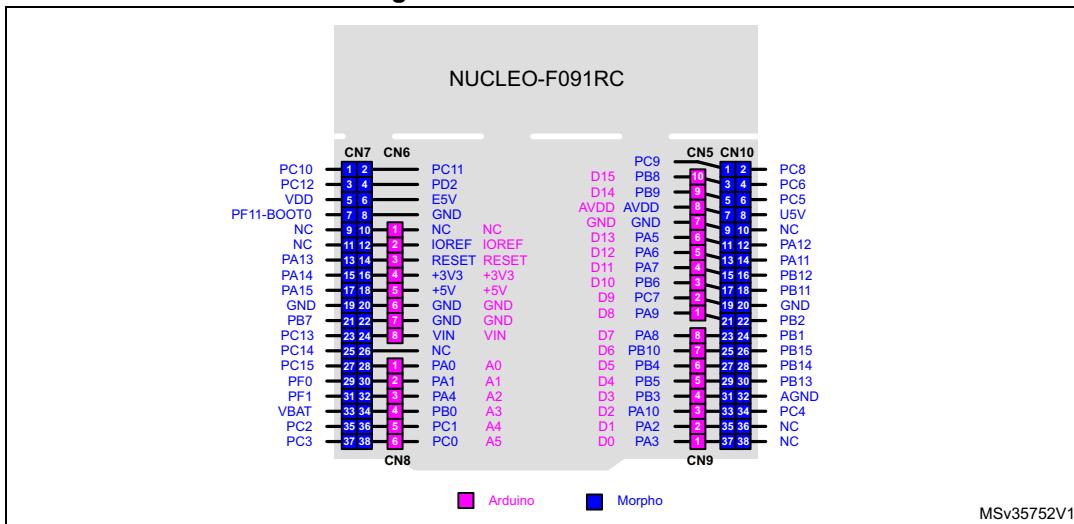


Figure 13. NUCLEO-F103RB

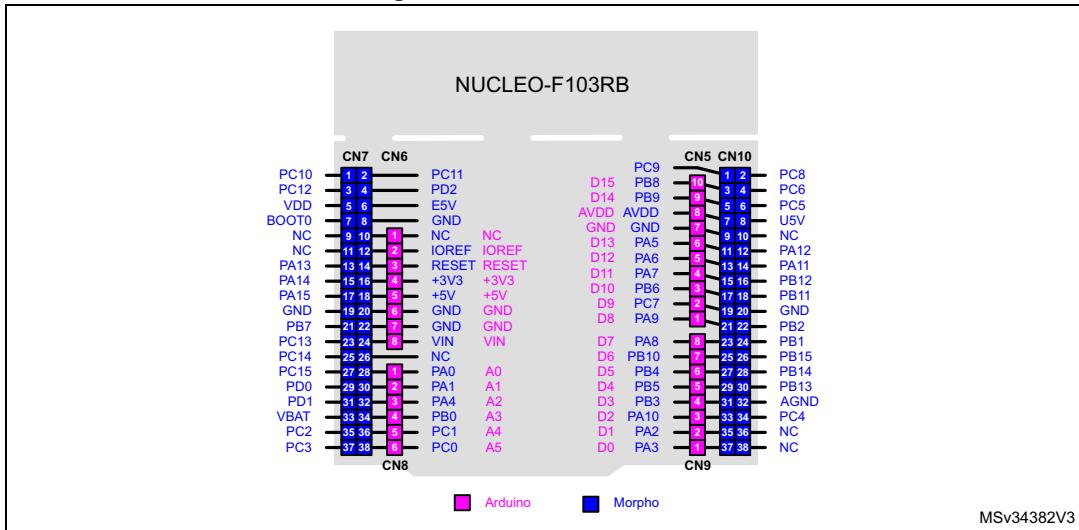


Figure 14. NUCLEO-F302R8

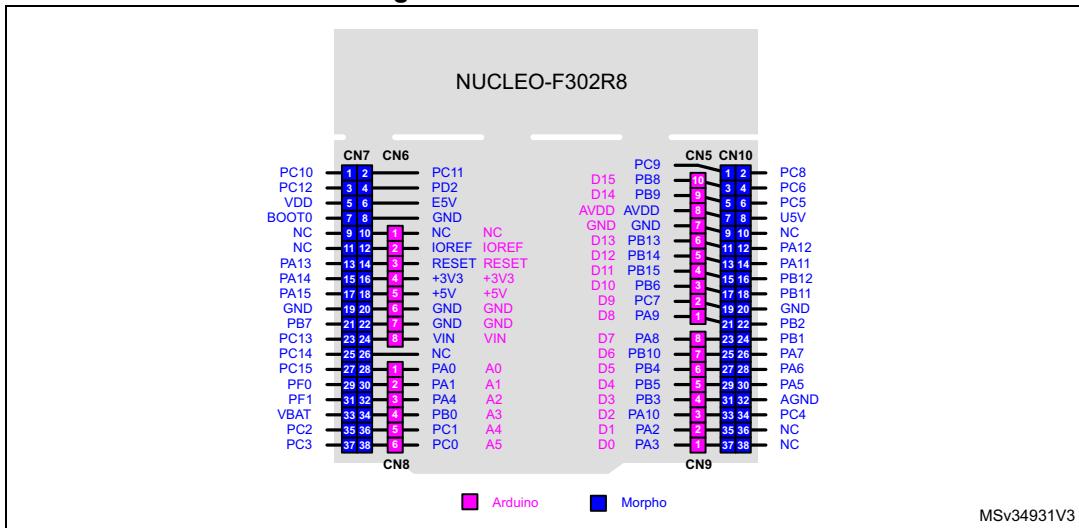


Figure 15. NUCLEO-F303RE

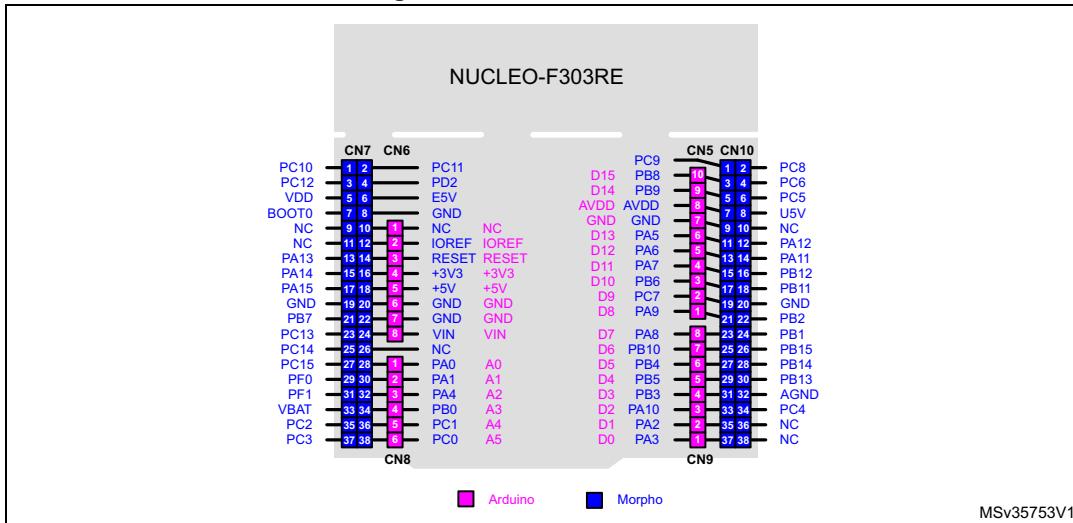


Figure 16. NUCLEO-F334R8

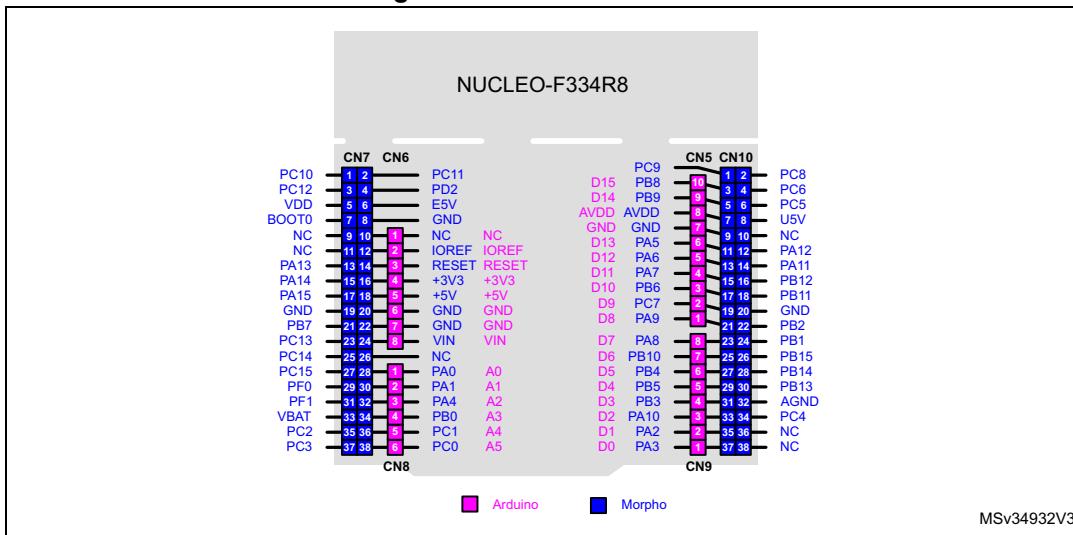


Figure 17. NUCLEO-F401RE

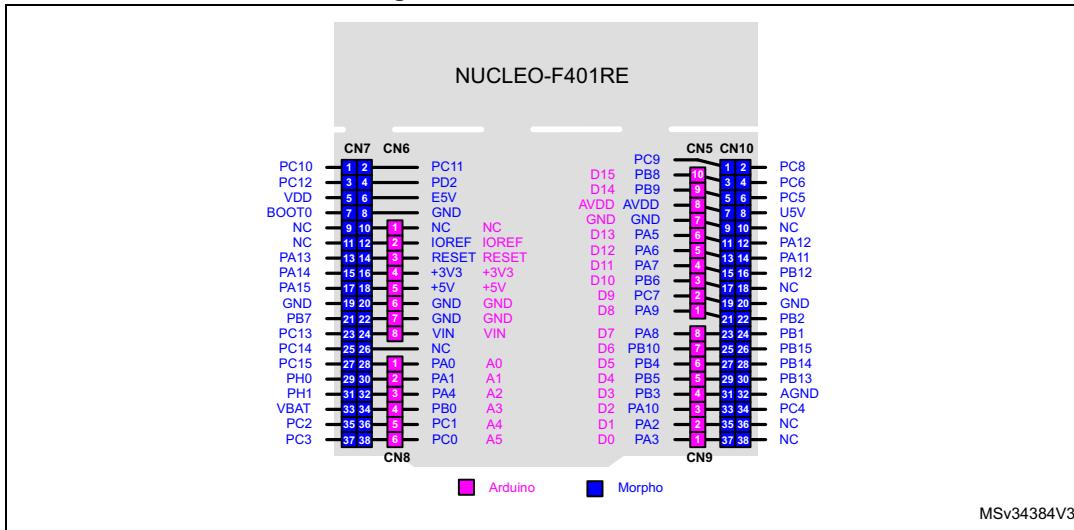


Figure 18. NUCLEO-F411RE

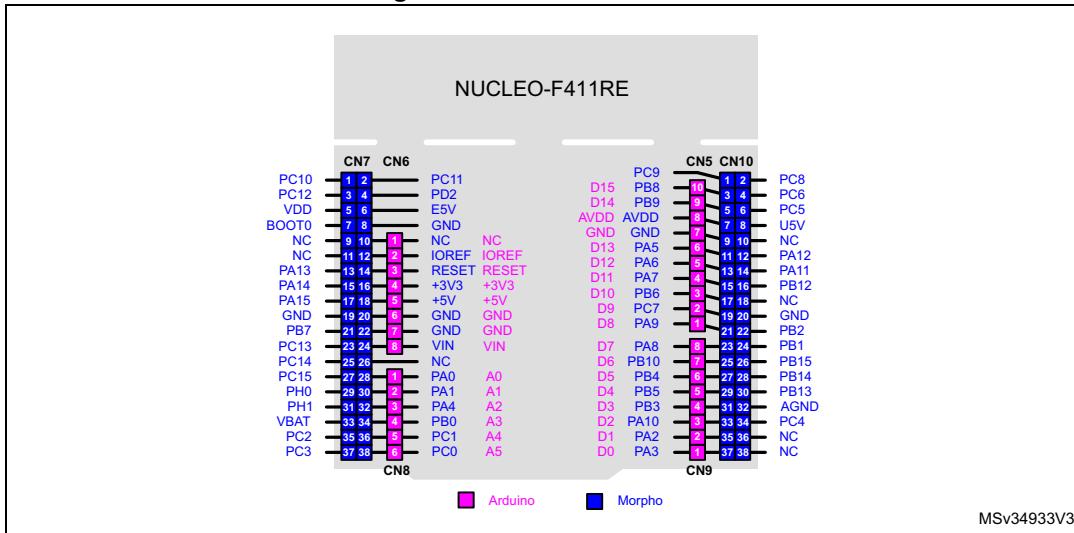


Figure 19. NUCLEO-L053R8

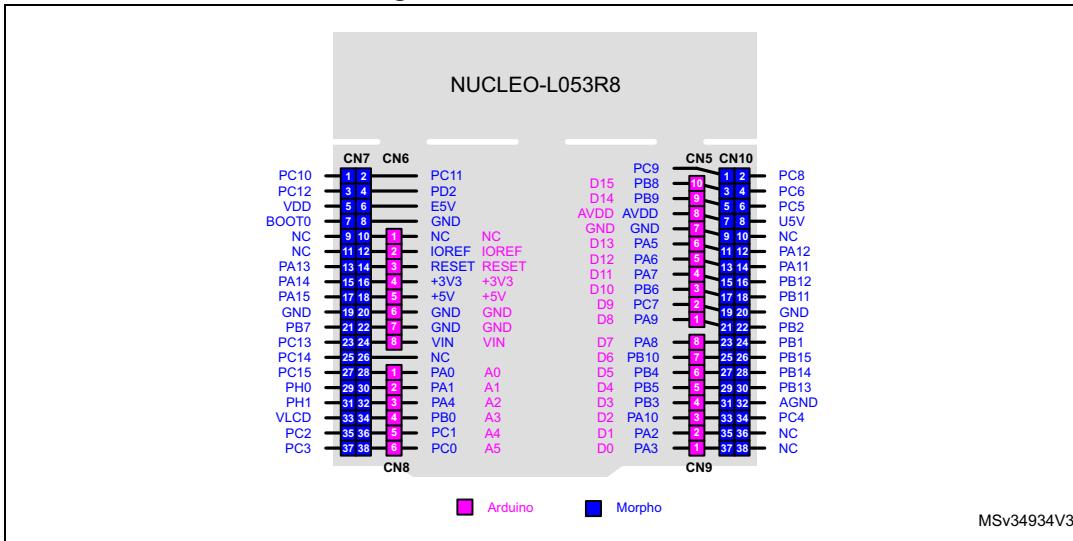


Figure 20. NUCLEO-L073RZ

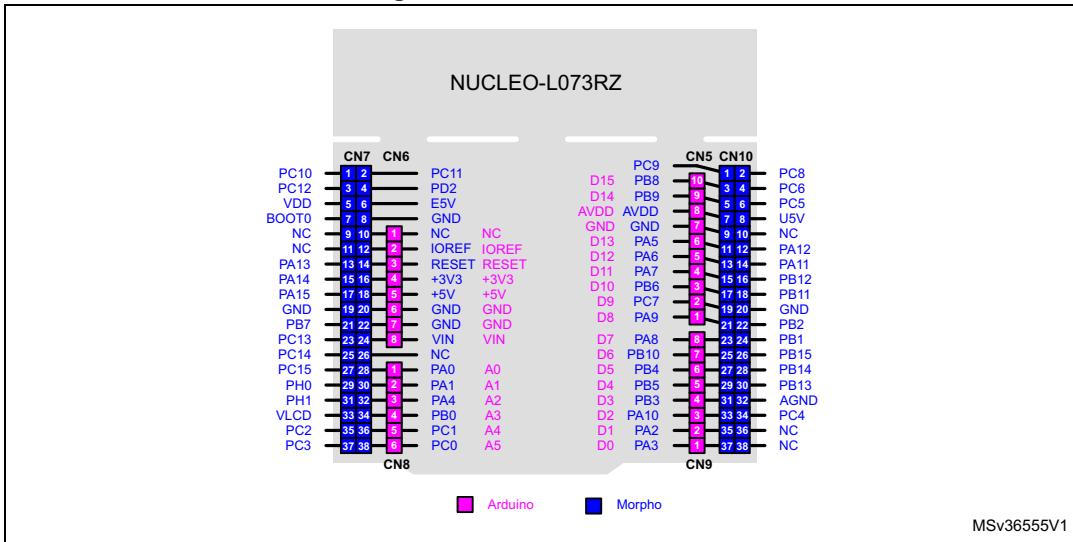


Figure 21. NUCLEO-L152RE

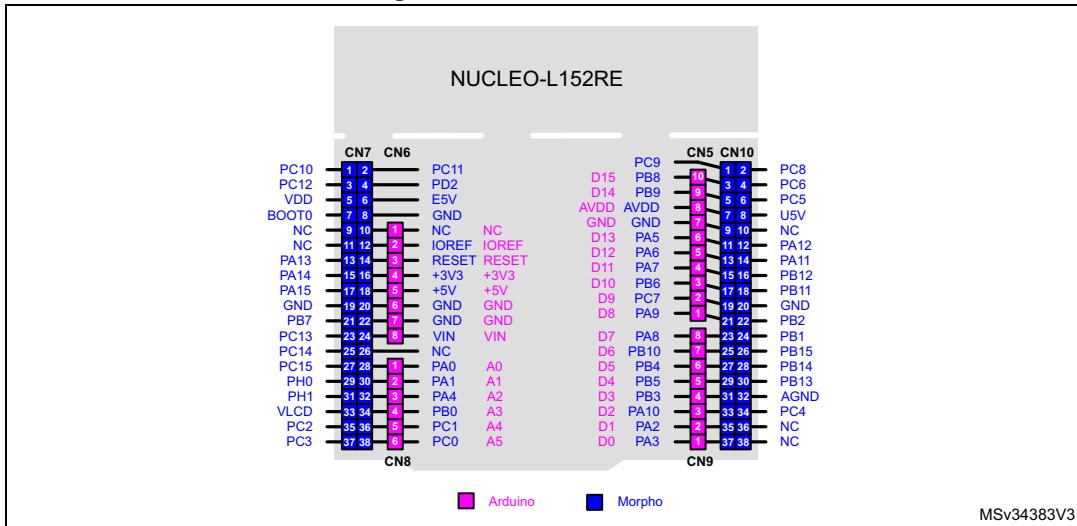


Figure 22. NUCLEO-L476RG

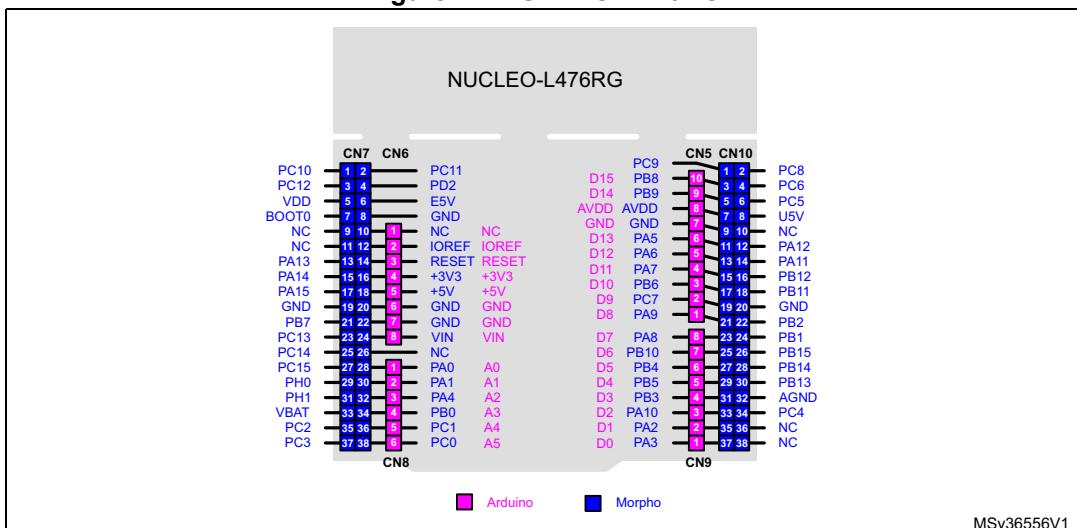


Figure 23. NUCLEO-F446RE


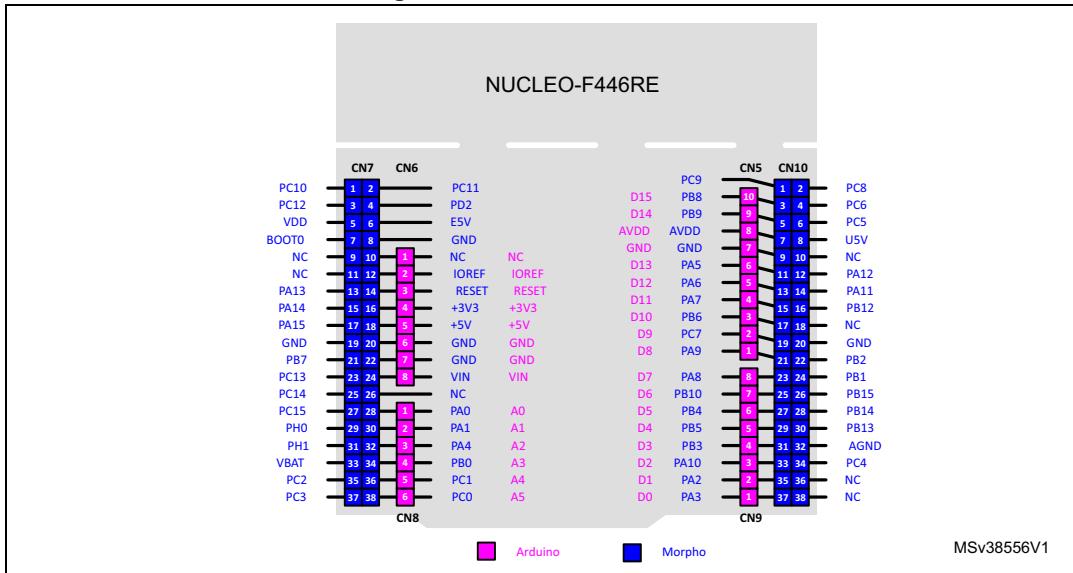


Figure 24. NUCLEO-F410RB

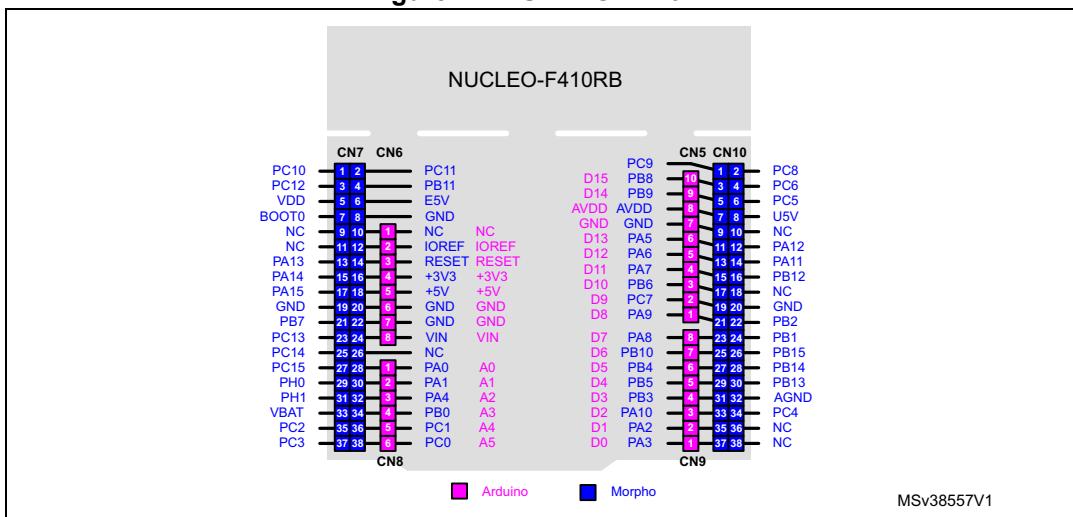

6.11 Arduino connectors

CN5, CN6, CN8 and CN9 are female connectors compatible with Arduino standard. Most shields designed for Arduino can fit to the STM32 Nucleo boards.

The Arduino connectors on STM32 Nucleo board support the Arduino Uno Revision 3.

For compatibility with Arduino Uno Revision 1, apply the following modifications:

- SB46 and SB52 should be ON,
- SB51 and SB56 should be OFF to connect I2C on A4 (pin 5) and A5 (pin 6 of CN8).

Caution: The IOs of STM32 microcontroller are 3.3 V compatible instead of 5 V for Arduino Uno.

Table 10 to *Table 21* show the pin assignment of each main STM32 microcontroller on Arduino connectors.

**Table 10. Arduino connectors on NUCLEO-F030R8, NUCLEO-F070RB,
NUCLEO-F072RB, NUCLEO-F091RC**

| Connector | Pin | Pin name | MCU pin | Function |
|------------------|-----|----------|---------------------------|----------------------------------|
| Left connectors | | | | |
| CN6 power | 1 | NC | - | - |
| | 2 | IOREF | - | 3.3V Ref |
| | 3 | RESET | NRST | RESET |
| | 4 | +3V3 | - | 3.3V input/output |
| | 5 | +5V | - | 5V output |
| | 6 | GND | - | Ground |
| | 7 | GND | - | Ground |
| | 8 | VIN | - | Power input |
| CN8 analog | 1 | A0 | PA0 | ADC_IN0 |
| | 2 | A1 | PA1 | ADC_IN1 |
| | 3 | A2 | PA4 | ADC_IN4 |
| | 4 | A3 | PB0 | ADC_IN8 |
| | 5 | A4 | PC1 or PB9 ⁽¹⁾ | ADC_IN11 (PC1) or I2C1_SDA (PB9) |
| | 6 | A5 | PC0 or PB8 ⁽¹⁾ | ADC_IN10 (PC0) or I2C1_SCL (PB8) |
| Right connectors | | | | |
| CN5 digital | 10 | D15 | PB8 | I2C1_SCL |
| | 10 | D15 | PB8 | I2C1_SCL |
| | 10 | D15 | PB8 | I2C1_SCL |
| | 9 | D14 | PB9 | I2C1_SDA |
| | 8 | AREF | - | AVDD |
| | 7 | GND | - | Ground |
| | 6 | D13 | PA5 | SPI1_SCK |
| | 5 | D12 | PA6 | SPI1_MISO |

**Table 10. Arduino connectors on NUCLEO-F030R8, NUCLEO-F070RB,
NUCLEO-F072RB, NUCLEO-F091RC (continued)**

| Connector | Pin | Pin name | MCU pin | Function |
|-------------|-----|----------|---------|-------------------------|
| CN5 digital | 4 | D11 | PA7 | TIM17_CH1 or SPI1_MOSI |
| | 3 | D10 | PB6 | TIM16_CH1N or SPI1_CS |
| | 2 | D9 | PC7 | TIM3_CH2 |
| | 1 | D8 | PA9 | - |
| CN9 digital | 8 | D7 | PA8 | - |
| | 7 | D6 | PB10 | TIM2_CH3 ⁽²⁾ |
| | 6 | D5 | PB4 | TIM3_CH1 |
| | 5 | D4 | PB5 | - |
| | 4 | D3 | PB3 | TIM2_CH2 ⁽³⁾ |
| | 3 | D2 | PA10 | - |
| | 2 | D1 | PA2 | USART2_TX |
| | 1 | D0 | PA3 | USART2_RX |

1. Refer to [Table 9: Solder bridges](#) for details.

2. PWM is not supported by D6 on STM32F030 and STM32F070 since the timer is not available on PB10.

3. PWM is not supported by D3 on STM32F030 and STM32F070 since the timer is not available on PB3.

Table 11. Arduino connectors on NUCLEO-F103RB

| Connector | Pin | Pin name | MCU pin | Function |
|------------------|-----|----------|---------------------------|--------------------------------|
| Left connectors | | | | |
| CN6 power | 1 | NC | NRST | - |
| | 2 | IOREF | | 3.3V Ref |
| | 3 | RESET | NRST | RESET |
| | 4 | +3V3 | | 3.3V input/output |
| | 5 | +5V | - | 5V output |
| | 6 | GND | | Ground |
| | 7 | GND | | Ground |
| | 8 | VIN | | Power input |
| CN8 analog | 1 | A0 | PA0 | ADC_0 |
| | 2 | A1 | PA1 | ADC_1 |
| | 3 | A2 | PA4 | ADC_4 |
| | 4 | A3 | PB0 | ADC_8 |
| | 5 | A4 | PC1 or PB9 ⁽¹⁾ | ADC_11 (PC1) or I2C1_SDA (PB9) |
| | 6 | A5 | PC0 or PB8 ⁽¹⁾ | ADC_10 (PC0) or I2C1_SCL (PB8) |
| Right connectors | | | | |
| CN5 digital | 10 | D15 | PB8 | I2C1_SCL |
| | 10 | D15 | PB8 | I2C1_SCL |
| | 9 | D14 | PB9 | I2C1_SDA |
| | 8 | AREF | - | AVDD |
| | 7 | GND | | Ground |
| | 6 | D13 | PA5 | SPI1_SCK |
| | 5 | D12 | PA6 | SPI1_MISO |
| | 4 | D11 | PA7 | TIM3_CH2 or SPI1_MOSI |
| | 3 | D10 | PB6 | TIM4_CH1 or SPI1_CS |
| | 2 | D9 | PC7 | TIM3_CH2 |
| CN9 digital | 1 | D8 | PA9 | - |
| | 8 | D7 | PA8 | |
| | 7 | D6 | PB10 | TIM2_CH3 |
| | 6 | D5 | PB4 | TIM3_CH1 |
| | 5 | D4 | PB5 | - |
| | 4 | D3 | PB3 | TIM2_CH2 |
| | 3 | D2 | PA10 | - |
| | 2 | D1 | PA2 | USART2_TX |
| | 1 | D0 | PA3 | USART2_RX |

1. Refer to [Table 9: Solder bridges](#) for details.

Table 12. Arduino connectors on NUCLEO-F302R8

| Connector | Pin | Pin name | MCU pin | Function |
|------------------|-----|----------|---------------------------|---------------------------------|
| Left connectors | | | | |
| CN6 power | 1 | NC | - | - |
| | 2 | IOREF | - | 3.3V Ref |
| | 3 | RESET | NRST | RESET |
| | 4 | +3V3 | - | 3.3V input/output |
| | 5 | +5V | - | 5V output |
| | 6 | GND | - | Ground |
| | 7 | GND | - | Ground |
| | 8 | VIN | - | Power input |
| CN8 analog | 1 | A0 | PA0 | ADC_IN1 |
| | 2 | A1 | PA1 | ADC_IN2 |
| | 3 | A2 | PA4 | ADC_IN5 |
| | 4 | A3 | PB0 | ADC_IN11 |
| | 5 | A4 | PC1 or PB9 ⁽¹⁾ | ADC_IN7 (PC1) or I2C1_SDA (PB9) |
| | 6 | A5 | PC0 or PB8 ⁽¹⁾ | ADC_IN6 (PC0) or I2C1_SCL (PB8) |
| Right connectors | | | | |
| CN5 digital | 10 | D15 | PB8 | I2C1_SCL |
| | 9 | D14 | PB9 | I2C1_SDA |
| | 8 | AREF | - | AVDD |
| | 7 | GND | - | Ground |
| | 6 | D13 | PB13 | SPI2_SCK |
| | 5 | D12 | PB14 | SPI2_MISO |
| | 4 | D11 | PB15 | TIM15_CH2 or SPI2_MOSI |
| | 3 | D10 | PB6 | TIM16_CH1N or SPI2_CS |
| | 2 | D9 | PC7 | - |
| | 1 | D8 | PA9 | - |
| CN9 digital | 8 | D7 | PA8 | - |
| | 7 | D6 | PB10 | TIM2_CH3 |
| | 6 | D5 | PB4 | TIM16_CH1 |
| | 5 | D4 | PB5 | - |
| | 4 | D3 | PB3 | TIM2_CH2 |
| | 3 | D2 | PA10 | - |
| | 2 | D1 | PA2 | USART2_TX |
| | 1 | D0 | PA3 | USART2_RX |

1. Refer to [Table 9: Solder bridges](#) for details.

Warning: PWM is not supported by D9 on STM32F302 since the timer is not available on PC7.

Table 13. Arduino connectors on NUCLEO-F303RE

| Connector | Pin | Pin name | MCU pin | Function |
|------------------|-----|----------|---------------------------|-----------------------------------|
| Left connectors | | | | |
| CN6 power | 1 | NC | - | - |
| | 2 | IOREF | - | 3.3V Ref |
| | 3 | RESET | NRST | RESET |
| | 4 | +3V3 | - | 3.3V input/output |
| | 5 | +5V | - | 5V output |
| | 6 | GND | - | Ground |
| | 7 | GND | - | Ground |
| | 8 | VIN | - | Power input |
| CN8 analog | 1 | A0 | PA0 | ADC1_IN1 |
| | 2 | A1 | PA1 | ADC1_IN2 |
| | 3 | A2 | PA4 | ADC2_IN1 |
| | 4 | A3 | PB0 | ADC3_IN12 |
| | 5 | A4 | PC1 or PB9 ⁽¹⁾ | ADC12_IN7 (PC1) or I2C1_SDA (PB9) |
| | 6 | A5 | PC0 or PB8 ⁽¹⁾ | ADC12_IN6 (PC0) or I2C1_SCL (PB8) |
| Right connectors | | | | |
| CN5 digital | 10 | D15 | PB8 | I2C1_SCL |
| | 9 | D14 | PB9 | I2C1_SDA |
| | 8 | AREF | - | AVDD |
| | 7 | GND | - | Ground |
| | 6 | D13 | PA5 | SPI1_SCK |
| | 5 | D12 | PA6 | SPI1_MISO |
| | 4 | D11 | PA7 | TIM17_CH1 or SPI1_MOSI |
| | 3 | D10 | PB6 | TIM4_CH1 or SPI1_CS |
| | 2 | D9 | PC7 | TIM3_CH2 |
| | 1 | D8 | PA9 | - |

Table 13. Arduino connectors on NUCLEO-F303RE (continued)

| Connector | Pin | Pin name | MCU pin | Function |
|-------------|-----|----------|---------|-----------|
| CN9 digital | 8 | D7 | PA8 | - |
| | 7 | D6 | PB10 | TIM2_CH3 |
| | 6 | D5 | PB4 | TIM3_CH1 |
| | 5 | D4 | PB5 | - |
| | 4 | D3 | PB3 | TIM2_CH2 |
| | 3 | D2 | PA10 | - |
| | 2 | D1 | PA2 | USART2_TX |

1. Refer to [Table 9: Solder bridges](#) for details.

Table 14. Arduino connectors on NUCLEO-F334R8

| Connector | Pin | Pin name | MCU pin | Function |
|------------------|-----|----------|---------------------------|---------------------------------|
| Left connectors | | | | |
| CN6 power | 1 | NC | - | - |
| | 2 | IOREF | - | 3.3V Ref |
| | 3 | RESET | NRST | RESET |
| | 4 | +3V3 | - | 3.3V input/output |
| | 5 | +5V | - | 5V output |
| | 6 | GND | - | Ground |
| | 7 | GND | - | Ground |
| | 8 | VIN | - | Power input |
| CN8 analog | 1 | A0 | PA0 | ADC1_IN1 |
| | 2 | A1 | PA1 | ADC1_IN2 |
| | 3 | A2 | PA4 | ADC2_IN1 |
| | 4 | A3 | PB0 | ADC1_IN11 |
| | 5 | A4 | PC1 or PB9 ⁽¹⁾ | ADC_IN7 (PC1) or I2C1_SDA (PB9) |
| | 6 | A5 | PC0 or PB8 ⁽¹⁾ | ADC_IN6 (PC0) or I2C1_SCL (PB8) |
| Right connectors | | | | |
| CN5 digital | 10 | D15 | PB8 | I2C1_SCL |
| | 9 | D14 | PB9 | I2C1_SDA |
| | 8 | AREF | - | AVDD |
| | 7 | GND | - | Ground |
| | 6 | D13 | PA5 | SPI1_SCK |
| | 5 | D12 | PA6 | SPI1_MISO |
| | 4 | D11 | PA7 | TIM17_CH1 or SPI1_MOSI |
| | 3 | D10 | PB6 | TIM16_CH1N or SPI1_CS |

Table 14. Arduino connectors on NUCLEO-F334R8 (continued)

| Connector | Pin | Pin name | MCU pin | Function |
|-------------|-----|----------|---------|-----------|
| CN5 digital | 2 | D9 | PC7 | TIM3_CH2 |
| | 1 | D8 | PA9 | - |
| CN9 digital | 8 | D7 | PA8 | - |
| | 7 | D6 | PB10 | TIM2_CH3 |
| | 6 | D5 | PB4 | TIM3_CH1 |
| | 5 | D4 | PB5 | - |
| | 4 | D3 | PB3 | TIM2_CH2 |
| | 3 | D2 | PA10 | - |
| | 2 | D1 | PA2 | USART2_TX |
| | 1 | D0 | PA3 | USART2_RX |

1. Refer to [Table 9: Solder bridges](#) for details.

Table 15. Arduino connectors on NUCLEO-F401RE and NUCLEO-F411RE

| Connector | Pin | Pin name | MCU pin | Function |
|------------------|-----|----------|---------------------------|---------------------------------|
| Left connectors | | | | |
| CN6 power | 1 | NC | - | - |
| | 2 | IOREF | - | 3.3V Ref |
| | 3 | RESET | NRST | RESET |
| | 4 | +3V3 | - | 3.3V input/output |
| | 5 | +5V | - | 5V output |
| | 6 | GND | - | Ground |
| | 7 | GND | - | Ground |
| | 8 | VIN | - | Power input |
| CN8 analog | 1 | A0 | PA0 | ADC1_0 |
| | 2 | A1 | PA1 | ADC1_1 |
| | 3 | A2 | PA4 | ADC1_4 |
| | 4 | A3 | PB0 | ADC1_8 |
| | 5 | A4 | PC1 or PB9 ⁽¹⁾ | ADC1_11 (PC1) or I2C1_SDA (PB9) |
| | 6 | A5 | PC0 or PB8 ⁽¹⁾ | ADC1_10 (PC0) or I2C1_SCL (PB8) |
| Right connectors | | | | |
| CN5 digital | 10 | D15 | PB8 | I2C1_SCL |
| | 10 | D15 | PB8 | I2C1_SCL |
| | 9 | D14 | PB9 | I2C1_SDA |
| | 8 | AREF | - | AVDD |
| | 7 | GND | - | Ground |

Table 15. Arduino connectors on NUCLEO-F401RE and NUCLEO-F411RE (continued)

| Connector | Pin | Pin name | MCU pin | Function |
|-------------|-----|----------|---------|------------------------|
| CN5 digital | 6 | D13 | PA5 | SPI1_SCK |
| | 5 | D12 | PA6 | SPI1_MISO |
| | 4 | D11 | PA7 | TIM1_CH1N or SPI1_MOSI |
| | 3 | D10 | PB6 | TIM4_CH1 or SPI1_CS |
| | 2 | D9 | PC7 | TIM3_CH2 |
| | 1 | D8 | PA9 | - |
| CN9 digital | 8 | D7 | PA8 | - |
| | 7 | D6 | PB10 | TIM2_CH3 |
| | 6 | D5 | PB4 | TIM3_CH1 |
| | 5 | D4 | PB5 | - |
| | 4 | D3 | PB3 | TIM2_CH2 |
| | 3 | D2 | PA10 | - |
| | 2 | D1 | PA2 | USART2_TX |
| | 1 | D0 | PA3 | USART2_RX |

1. Refer to [Table 9: Solder bridges](#) for details.

Table 16. Arduino connectors on NUCLEO-L053R8

| Connector | Pin | Pin name | MCU pin | Function |
|------------------|-----|----------|---------------------------|----------------------------------|
| Left connectors | | | | |
| CN6 power | 1 | NC | - | - |
| | 2 | IOREF | - | 3.3V Ref |
| | 3 | RESET | NRST | RESET |
| | 4 | +3V3 | - | 3.3V input/output |
| | 5 | +5V | - | 5V output |
| | 6 | GND | - | Ground |
| | 7 | GND | - | Ground |
| | 8 | VIN | - | Power input |
| CN8 analog | 1 | A0 | PA0 | ADC_IN0 |
| | 2 | A1 | PA1 | ADC_IN1 |
| | 3 | A2 | PA4 | ADC_IN4 |
| | 4 | A3 | PB0 | ADC_IN8 |
| | 5 | A4 | PC1 or PB9 ⁽¹⁾ | ADC_IN11 (PC1) or I2C1_SDA (PB9) |
| | 6 | A5 | PC0 or PB8 ⁽¹⁾ | ADC_IN10 (PC0) or I2C1_SCL (PB8) |
| Right connectors | | | | |
| CN5 digital | 10 | D15 | PB8 | I2C1_SCL |
| | 9 | D14 | PB9 | I2C1_SDA |
| | 8 | AREF | - | AVDD |
| | 7 | GND | - | Ground |
| | 6 | D13 | PA5 | SPI1_SCK |
| | 5 | D12 | PA6 | SPI1_MISO |
| | 4 | D11 | PA7 | TIM12_CH2 or SPI1_MOSI |
| | 3 | D10 | PB6 | SPI1_CS |
| | 2 | D9 | PC7 | TIM12_CH2 |
| | 1 | D8 | PA9 | - |
| CN9 digital | 8 | D7 | PA8 | - |
| | 7 | D6 | PB10 | TIM2_CH3 |
| | 6 | D5 | PB4 | TIM12_CH1 |
| | 5 | D4 | PB5 | - |
| | 4 | D3 | PB3 | TIM2_CH2 |
| | 3 | D2 | PA10 | - |
| | 2 | D1 | PA2 | USART2_TX |
| | 1 | D0 | PA3 | USART2_RX |

1. Refer to [Table 9: Solder bridges](#) for details.

Warning: PWM is not supported by D10 on STM32L053 since the timer is not available on PB6.

Table 17. Arduino connectors on NUCLEO-L073RZ

| Connector | Pin | Pin name | MCU pin | Function |
|------------------|-----|----------|---------------------------|----------------------------------|
| Left connectors | | | | |
| CN6 power | 1 | NC | - | - |
| | 2 | IOREF | - | 3.3V Ref |
| | 3 | RESET | NRST | RESET |
| | 4 | +3V3 | - | 3.3V input/output |
| | 5 | +5V | - | 5V output |
| | 6 | GND | - | Ground |
| | 7 | GND | - | Ground |
| | 8 | VIN | - | Power input |
| CN8 analog | 1 | A0 | PA0 | ADC_IN0 |
| | 2 | A1 | PA1 | ADC_IN1 |
| | 3 | A2 | PA4 | ADC_IN4 |
| | 4 | A3 | PB0 | ADC_IN8 |
| | 5 | A4 | PC1 or PB9 ⁽¹⁾ | ADC_IN11 (PC1) or I2C1_SDA (PB9) |
| | 6 | A5 | PC0 or PB8 ⁽¹⁾ | ADC_IN10 (PC0) or I2C1_SCL (PB8) |
| Right connectors | | | | |
| CN5 digital | 10 | D15 | PB8 | I2C1_SCL |
| | 9 | D14 | PB9 | I2C1_SDA |
| | 8 | AREF | - | AVDD |
| | 7 | GND | - | Ground |
| | 6 | D13 | PA5 | SPI1_SCK |
| | 5 | D12 | PA6 | SPI1_MISO |
| | 4 | D11 | PA7 | TIM22_CH2 or SPI1_MOSI |
| | 3 | D10 | PB6 | SPI1_CS |
| | 2 | D9 | PC7 | TIM3_CH2 |
| | 1 | D8 | PA9 | - |

Table 17. Arduino connectors on NUCLEO-L073RZ (continued)

| Connector | Pin | Pin name | MCU pin | Function |
|-------------|-----|----------|---------|-----------|
| CN9 digital | 8 | D7 | PA8 | - |
| | 7 | D6 | PB10 | TIM2_CH3 |
| | 6 | D5 | PB4 | TIM3_CH1 |
| | 5 | D4 | PB5 | - |
| | 4 | D3 | PB3 | TIM2_CH2 |
| | 3 | D2 | PA10 | - |
| | 2 | D1 | PA2 | USART2_TX |
| | 1 | D0 | PA3 | USART2_RX |

1. Refer to [Table 9: Solder bridges](#) for details.

Warning: PWM is not supported by D10 on STM32L073 since the timer is not available on PB6.

Table 18. Arduino connectors on NUCLEO-F446RE

| Connector | Pin | Pin name | MCU pin | Function |
|------------------|-----|----------|---------------------------|-------------------------------------|
| Left connectors | | | | |
| CN6 power | 1 | NC | - | - |
| | 2 | IOREF | - | 3.3V Ref |
| | 3 | RESET | NRST | RESET |
| | 4 | +3V3 | - | 3.3V input/output |
| | 5 | +5V | - | 5V output |
| | 6 | GND | - | Ground |
| | 7 | GND | - | Ground |
| | 8 | VIN | - | Power input |
| CN8 analog | 1 | A0 | PA0 | ADC123_IN0 |
| | 2 | A1 | PA1 | ADC123_IN1 |
| | 3 | A2 | PA4 | ADC12_IN4 |
| | 4 | A3 | PB0 | ADC12_IN8 |
| | 5 | A4 | PC1 or PB9 ⁽¹⁾ | ADC123_IN11 (PC1) or I2C1_SDA (PB9) |
| | 6 | A5 | PC0 or PB8(1) | ADC123_IN10 (PC0) or I2C1_SCL (PB8) |
| Right connectors | | | | |
| CN5 digital | 10 | D15 | PB8 | I2C1_SCL |
| | 10 | D15 | PB8 | I2C1_SCL |

Table 18. Arduino connectors on NUCLEO-F446RE (continued)

| Connector | Pin | Pin name | MCU pin | Function |
|-------------|-----|----------|---------|------------------------|
| CN5 digital | 9 | D14 | PB9 | I2C1_SDA |
| | 8 | AREF | - | AVDD |
| | 7 | GND | - | Ground |
| | 6 | D13 | PA5 | SPI1_SCK |
| | 5 | D12 | PA6 | SPI1_MISO |
| | 4 | D11 | PA7 | TIM14_CH1 SPI1_MOSI |
| | 3 | D10 | PB6 | TIM4_CH1 SPI1_CS |
| | 2 | D9 | PC7 | TIM8_CH2 |
| | 1 | D8 | PA9 | - |
| CN9 digital | 8 | D7 | PA8 | - |
| | 7 | D6 | PB10 | TIM2_CH3 |
| | 6 | D5 | PB4 | TIM3_CH1 |
| | 5 | D4 | PB5 | - |
| | 4 | D3 | PB3 | TIM2_CH2 |
| | 3 | D2 | PA10 | - |
| | 2 | D1 | PA2 | USART2_TX |
| | 1 | D0 | PA3 | USART2_RX |

1. Refer to [Table 9: Solder bridges](#) for details.

Table 19. Arduino connectors on NUCLEO-F410RB

| Connector | Pin | Pin name | MCU pin | Function |
|------------------|-----|----------|---------------------------|---------------------------------|
| Left connectors | | | | |
| CN6 power | 1 | NC | - | - |
| | 2 | IOREF | - | 3.3V Ref |
| | 3 | RESET | NRST | RESET |
| | 4 | +3V3 | - | 3.3V input/output |
| | 5 | +5V | - | 5V output |
| | 6 | GND | - | Ground |
| | 7 | GND | - | Ground |
| | 8 | VIN | - | Power input |
| CN8 analog | 1 | A0 | PA0 | ADC1_0 |
| | 2 | A1 | PA1 | ADC1_1 |
| | 3 | A2 | PA4 | ADC1_4 |
| | 4 | A3 | PB0 | ADC1_8 |
| | 5 | A4 | PC1 or PB9 ⁽¹⁾ | ADC1_11 (PC1) or I2C1_SDA (PB9) |
| | 6 | A5 | PC0 or PB8 ⁽¹⁾ | ADC1_10 (PC0) or I2C1_SCL (PB8) |
| Right connectors | | | | |
| CN5 digital | 10 | PB8 | D15 | I2C1_SCL |
| | 9 | PB9 | D14 | I2C1_SDA |
| | 8 | - | AREF | AVDD |
| | 7 | - | GND | Ground |
| | 6 | PA5 | D13 | SPI1_SCK |
| | 5 | PA6 | D12 | SPI1_MISO |
| | 4 | PA7 | D11 | TIM1_CH1N SPI1_MOSI |
| | 3 | PB6 | D10 | SPI1_CS |
| | 2 | PC7 | D9 | - |
| | 1 | PA9 | D8 | - |
| CN9 digital | 8 | PA8 | D7 | - |
| | 7 | PB10 | D6 | - |
| | 6 | PB4 | D5 | - |
| | 5 | PB5 | D4 | - |
| | 4 | PB3 | D3 | - |
| | 3 | PA10 | D2 | - |
| | 2 | PA2 | D1 | USART2_TX |
| | 1 | PA3 | D0 | USART2_RX |

1. Refer to [Table 9: Solder bridges](#) for details.

Warning: PWM is not supported by D3, D5, D6, D9 and D10 on STM32F410RB since timer is not available on PB6, PC7, PB10, PB4, PB3.

Table 20. Arduino connectors on NUCLEO-L152RE

| Connector | Pin | Pin name | MCU pin | Function |
|------------------|-----|----------|---------------------------|----------------------------------|
| Left connectors | | | | |
| CN6 power | 1 | NC | - | - |
| | 2 | IOREF | - | 3.3V Ref |
| | 3 | RESET | NRST | RESET |
| | 4 | +3V3 | - | 3.3V input/output |
| | 5 | +5V | - | 5V output |
| | 6 | GND | - | Ground |
| | 7 | GND | - | Ground |
| | 8 | VIN | - | Power input |
| CN8 analog | 1 | A0 | PA0 | ADC_IN0 |
| | 2 | A1 | PA1 | ADC_IN1 |
| | 3 | A2 | PA4 | ADC_IN4 |
| | 4 | A3 | PB0 | ADC_IN8 |
| | 5 | A4 | PC1 or PB9 ⁽¹⁾ | ADC_IN11 (PC1) or I2C1_SDA (PB9) |
| | 6 | A5 | PC0 or PB8 ⁽¹⁾ | ADC_IN10 (PC0) or I2C1_SCL (PB8) |
| Right connectors | | | | |
| CN5 digital | 10 | D15 | PB8 | I2C1_SCL |
| | 9 | D14 | PB9 | I2C1_SDA |
| | 8 | AREF | - | AVDD |
| | 7 | GND | - | Ground |
| | 6 | D13 | PA5 | SPI1_SCK |
| | 5 | D12 | PA6 | SPI1_MISO |
| | 4 | D11 | PA7 | TIM11_CH1 or SPI1_MOSI |
| | 3 | D10 | PB6 | TIM4_CH1 or SPI1_CS |
| | 2 | D9 | PC7 | TIM3_CH2 |
| | 1 | D8 | PA9 | - |
| CN9 digital | 8 | D7 | PA8 | - |
| | 7 | D6 | PB10 | TIM2_CH3 |
| | 6 | D5 | PB4 | TIM3_CH1 |
| | 5 | D4 | PB5 | - |

Table 20. Arduino connectors on NUCLEO-L152RE (continued)

| Connector | Pin | Pin name | MCU pin | Function |
|-------------|-----|----------|---------|-----------|
| CN9 digital | 4 | D3 | PB3 | TIM2_CH2 |
| | 3 | D2 | PA10 | - |
| | 2 | D1 | PA2 | USART2_TX |
| | 1 | D0 | PA3 | USART2_RX |

1. Refer to [Table 9: Solder bridges](#) for details.

Table 21. Arduino connectors on NUCLEO-L476RG

| Connector | Pin | Pin name | MCU pin | Function |
|------------------|-----|----------|---------------------------|------------------------------------|
| Left connectors | | | | |
| CN6 power | 1 | NC | - | - |
| | 2 | IOREF | - | 3.3V Ref |
| | 3 | RESET | NRST | RESET |
| | 4 | +3V3 | - | 3.3V input/output |
| | 5 | +5V | - | 5V output |
| | 6 | GND | - | Ground |
| | 7 | GND | - | Ground |
| | 8 | VIN | - | Power input |
| CN8 analog | 1 | A0 | PA0 | ADC12_IN5 |
| | 2 | A1 | PA1 | ADC12_IN6 |
| | 3 | A2 | PA4 | ADC12_IN9 |
| | 4 | A3 | PB0 | ADC12_IN15 |
| | 5 | A4 | PC1 or PB9 ⁽¹⁾ | ADC123_IN2 (PC1) or I2C1_SDA (PB9) |
| | 6 | A5 | PC0 or PB8 ⁽¹⁾ | ADC123_IN1 (PC0) or I2C1_SCL (PB8) |
| Right connectors | | | | |
| CN5 digital | 10 | D15 | PB8 | I2C1_SCL |
| | 9 | D14 | PB9 | I2C1_SDA |
| | 8 | AREF | - | AVDD |
| | 7 | GND | - | Ground |
| | 6 | D13 | PA5 | SPI1_SCK |
| | 5 | D12 | PA6 | SPI1_MISO |
| | 4 | D11 | PA7 | TIM17_CH1 or SPI1_MOSI |
| | 3 | D10 | PB6 | TIM4_CH1 or SPI1_CS |
| | 2 | D9 | PC7 | TIM3_CH2 |
| | 1 | D8 | PA9 | - |
| CN9 digital | 8 | D7 | PA8 | - |

Table 21. Arduino connectors on NUCLEO-L476RG (continued)

| Connector | Pin | Pin name | MCU pin | Function |
|-------------|-----|----------|---------|-----------|
| CN9 digital | 7 | D6 | PB10 | TIM2_CH3 |
| | 6 | D5 | PB4 | TIM3_CH1 |
| | 5 | D4 | PB5 | - |
| | 4 | D3 | PB3 | TIM2_CH2 |
| | 3 | D2 | PA10 | - |
| | 2 | D1 | PA2 | USART2_TX |
| | 1 | D0 | PA3 | USART2_RX |

1. Refer to [Table 9: Solder bridges](#) for details.

6.12 ST morpho connector

The ST morpho connector consists in male pin headers (CN7 and CN10) accessible on both sides of the board. They can be used to connect the STM32 Nucleo board to an extension board or a prototype/wrapping board placed on top or on bottom side of the STM32 Nucleo board. All signals and power pins of the MCU are available on ST morpho connector. This connector can also be probed by an oscilloscope, logical analyzer or voltmeter.

[Table 22](#) to [Table 30](#) show the pin assignment of each main MCU on ST morpho connector.

Table 22. ST morpho connector on NUCLEO-F030R8

| CN7 odd pins | | CN7 even pins | | CN10 odd pins | | CN10 even pins | |
|--------------|----------------------|---------------|-----|---------------|------|--------------------|-----|
| Pin | Name | Name | Pin | Pin | Name | Name | Pin |
| 1 | PC10 | PC11 | 2 | 1 | PC9 | PC8 | 2 |
| 3 | PC12 | PD2 | 4 | 3 | PB8 | PC6 | 4 |
| 5 | VDD | E5V | 6 | 5 | PB9 | PC5 | 6 |
| 7 | BOOT0 ⁽¹⁾ | GND | 8 | 7 | AVDD | U5V ⁽²⁾ | 8 |
| 9 | PF6 | - | 10 | 9 | GND | - | 10 |
| 11 | PF7 | IOREF | 12 | 11 | PA5 | PA12 | 12 |
| 13 | PA13 | RESET | 14 | 13 | PA6 | PA11 | 14 |
| 15 | PA14 | +3V3 | 16 | 15 | PA7 | PB12 | 16 |
| 17 | PA15 | +5V | 18 | 17 | PB6 | PB11 | 18 |
| 19 | GND | GND | 20 | 19 | PC7 | GND | 20 |
| 21 | PB7 | GND | 22 | 21 | PA9 | PB2 | 22 |
| 23 | PC13 ⁽³⁾ | VIN | 24 | 23 | PA8 | PB1 | 24 |
| 25 | PC14 ⁽³⁾ | - | 26 | 25 | PB10 | PB15 | 26 |
| 27 | PC15 | PA0 | 28 | 27 | PB4 | PB14 | 28 |
| 29 | PF0 | PA1 | 30 | 29 | PB5 | PB13 | 30 |
| 31 | PF1 | PA4 | 32 | 31 | PB3 | AGND | 32 |

Table 22. ST morpho connector on NUCLEO-F030R8 (continued)

| CN7 odd pins | | CN7 even pins | | CN10 odd pins | | CN10 even pins | |
|--------------|------|---------------------------|-----|---------------|------|----------------|-----|
| Pin | Name | Name | Pin | Pin | Name | Name | Pin |
| 33 | VBAT | PB0 | 34 | 33 | PA10 | PC4 | 34 |
| 35 | PC2 | PC1 or PB9 ⁽⁴⁾ | 36 | 35 | PA2 | PF5 | 36 |
| 37 | PC3 | PC0 or PB8 ⁽⁴⁾ | 38 | 37 | PA3 | PF4 | 38 |

1. Default state of BOOT0 is 0. It can be set to 1 when a jumper is on pin5-7 of CN7. Two unused jumpers are available on CN11 and CN12 (bottom side of the board).
2. U5V is 5 V power from ST-LINK/V2-1 USB connector and it rises before +5V.
3. PA13 and PA14 share with SWD signals connected to ST-LINK/V2-1, it is not recommend to use them as IO pins if ST-LINK part is not cut.
4. Refer to [Table 9: Solder bridges](#) for details.

Table 23. ST morpho connector on NUCLEO-F070RB

| CN7 odd pins | | CN7 even pins | | CN10 odd pins | | CN10 even pins | |
|--------------|----------------------|---------------------------|-----|---------------|------|--------------------|-----|
| Pin | Name | Name | Pin | Pin | Name | Name | Pin |
| 1 | PC10 | PC11 | 2 | 1 | PC9 | PC8 | 2 |
| 3 | PC12 | PD2 | 4 | 3 | PB8 | PC6 | 4 |
| 5 | VDD | E5V | 6 | 5 | PB9 | PC5 | 6 |
| 7 | BOOT0 ⁽¹⁾ | GND | 8 | 7 | AVDD | U5V ⁽²⁾ | 8 |
| 9 | - | - | 10 | 9 | GND | - | 10 |
| 11 | - | IOREF | 12 | 11 | PA5 | PA12 | 12 |
| 13 | PA13 ⁽³⁾ | RESET | 14 | 13 | PA6 | PA11 | 14 |
| 15 | PA14 ⁽³⁾ | +3V3 | 16 | 15 | PA7 | PB12 | 16 |
| 17 | PA15 | +5V | 18 | 17 | PB6 | PB11 | 18 |
| 19 | GND | GND | 20 | 19 | PC7 | GND | 20 |
| 21 | PB7 | GND | 22 | 21 | PA9 | PB2 | 22 |
| 23 | PC13 | VIN | 24 | 23 | PA8 | PB1 | 24 |
| 25 | PC14 | - | 26 | 25 | PB10 | PB15 | 26 |
| 27 | PC15 | PA0 | 28 | 27 | PB4 | PB14 | 28 |
| 29 | PF0 | PA1 | 30 | 29 | PB5 | PB13 | 30 |
| 31 | PF1 | PA4 | 32 | 31 | PB3 | AGND | 32 |
| 33 | VDD | PB0 | 34 | 33 | PA10 | PC4 | 34 |
| 35 | PC2 | PC1 or PB9 ⁽⁴⁾ | 36 | 35 | PA2 | - | 36 |
| 37 | PC3 | PC0 or PB8 ⁽⁴⁾ | 38 | 37 | PA3 | - | 38 |

1. Default state of BOOT0 is 0. It can be set to 1 when a jumper is on pin5-7 of CN7.
2. U5V is 5 V power from ST-LINK/V2-1 USB connector and it rises before +5V.
3. PA13 and PA14 share with SWD signals connected to ST-LINK/V2-1, it is not recommend to use them as IO pins if ST-LINK part is not cut.
4. Refer to [Table 9: Solder bridges](#) for details.

Table 24. ST morpho connector on NUCLEO-F072RB, NUCLEO-F091RC, NUCLEO-F303RE, NUCLEO-F334R8

| CN7 odd pins | | CN7 even pins | | CN10 odd pins | | CN10 even pins | |
|--------------|-------------------------|---------------------------|-----|---------------|------|--------------------|-----|
| Pin | Name | Name | Pin | Pin | Name | Name | Pin |
| 1 | PC10 | PC11 | 2 | 1 | PC9 | PC8 | 2 |
| 3 | PC12 | PD2 | 4 | 3 | PB8 | PC6 | 4 |
| 5 | VDD | E5V | 6 | 5 | PB9 | PC5 | 6 |
| 7 | BOOT0 ⁽¹⁾⁽²⁾ | GND | 8 | 7 | AVDD | U5V ⁽³⁾ | 8 |
| 9 | - | - | 10 | 9 | GND | - | 10 |
| 11 | - | IOREF | 12 | 11 | PA5 | PA12 | 12 |
| 13 | PA13 ⁽⁴⁾ | RESET | 14 | 13 | PA6 | PA11 | 14 |
| 15 | PA14 ⁽⁴⁾ | +3V3 | 16 | 15 | PA7 | PB12 | 16 |
| 17 | PA15 | +5V | 18 | 17 | PB6 | PB11 | 18 |
| 19 | GND | GND | 20 | 19 | PC7 | GND | 20 |
| 21 | PB7 | GND | 22 | 21 | PA9 | PB2 | 22 |
| 23 | PC13 | VIN | 24 | 23 | PA8 | PB1 | 24 |
| 25 | PC14 | - | 26 | 25 | PB10 | PB15 | 26 |
| 27 | PC15 | PA0 | 28 | 27 | PB4 | PB14 | 28 |
| 29 | PF0 | PA1 | 30 | 29 | PB5 | PB13 | 30 |
| 31 | PF1 | PA4 | 32 | 31 | PB3 | AGND | 32 |
| 33 | VBAT | PB0 | 34 | 33 | PA10 | PC4 | 34 |
| 35 | PC2 | PC1 or PB9 ⁽⁵⁾ | 36 | 35 | PA2 | - | 36 |
| 37 | PC3 | PC0 or PB8 ⁽⁵⁾ | 38 | 37 | PA3 | - | 38 |

1. Default state of BOOT0 is 0. It can be set to 1 when a jumper is on pin5-7 of CN7. Two unused jumpers are available on CN11 and CN12 (bottom side of the board).
2. CN7 pin 7 (BOOT0) can be configured by engineering byte as PF11 on NUCLEO-F091RC.
3. U5V is 5 V power from ST-LINK/V2-1 USB connector and it rises before +5V.
4. PA13 and PA14 share with SWD signals connected to ST-LINK/V2-1, it is not recommended to use them as IO pins if ST-LINK part is not cut.
5. Refer to [Table 9: Solder bridges](#) for details.

Table 25. ST morpho connector on NUCLEO-F103RB

| CN7 odd pins | | CN7 even pins | | CN10 odd pins | | CN10 even pins | |
|--------------|------|---------------|-----|---------------|------|----------------|-----|
| Pin | Name | Name | Pin | Pin | Name | Name | Pin |
| 1 | PC10 | PC11 | 2 | 1 | PC9 | PC8 | 2 |
| 3 | PC12 | PD2 | 4 | 3 | PB8 | PC6 | 4 |
| 5 | VDD | E5V | 6 | 5 | PB9 | PC5 | 6 |

Table 25. ST morpho connector on NUCLEO-F103RB (continued)

| CN7 odd pins | | CN7 even pins | | CN10 odd pins | | CN10 even pins | |
|--------------|----------------------|------------------------------|-----|---------------|------|--------------------|-----|
| Pin | Name | Name | Pin | Pin | Name | Name | Pin |
| 7 | BOOT0 ⁽¹⁾ | GND | 8 | 7 | AVDD | U5V ⁽²⁾ | 8 |
| 9 | - | - | 10 | 9 | GND | - | 10 |
| 11 | - | IOREF | 12 | 11 | PA5 | PA12 | 12 |
| 13 | PA13 ⁽³⁾ | RESET | 14 | 13 | PA6 | PA11 | 14 |
| 15 | PA14 ⁽³⁾ | +3V3 | 16 | 15 | PA7 | PB12 | 16 |
| 17 | PA15 | +5V | 18 | 17 | PB6 | PB11 | 18 |
| 19 | GND | GND | 20 | 19 | PC7 | GND | 20 |
| 21 | PB7 | GND | 22 | 21 | PA9 | PB2 | 22 |
| 23 | PC13 | VIN | 24 | 23 | PA8 | PB1 | 24 |
| 25 | PC14 | - | 26 | 25 | PB10 | PB15 | 26 |
| 27 | PC15 | PA0 | 28 | 27 | PB4 | PB14 | 28 |
| 29 | PD0 | PA1 | 30 | 29 | PB5 | PB13 | 30 |
| 31 | PD1 | PA4 | 32 | 31 | PB3 | AGND | 32 |
| 33 | VBAT | PB0 | 34 | 33 | PA10 | PC4 | 34 |
| 35 | PC2 | PC1 or PB9 ⁽⁴⁾ | 36 | 35 | PA2 | - | 36 |
| 37 | PC3 | PC0 or PB8 ⁽⁴⁾ | 38 | 37 | PA3 | - | 38 |

1. The default state of BOOT0 is 0. It can be set to 1 when a jumper is on pin5-7 of CN7.Two unused jumpers are available on CN11 and CN12 (bottom side of the board).
2. U5V is 5 V power from ST-LINK/V2-1 USB connector and it rises before +5 V.
3. PA13 and PA14 share with SWD signals connected to ST-LINK/V2-1, it is not recommended to use them as IO pins if ST-LINK part is not cut.
4. Refer to [Table 9: Solder bridges](#) for details.

Table 26. ST morpho connector on NUCLEO-F302R8

| CN7 odd pins | | CN7 even pins | | CN10 odd pins | | CN10 even pins | |
|--------------|----------------------|---------------------------|-----|---------------|------|--------------------|-----|
| Pin | Name | Name | Pin | Pin | Name | Name | Pin |
| 1 | PC10 | PC11 | 2 | 1 | PC9 | PC8 | 2 |
| 3 | PC12 | PD2 | 4 | 3 | PB8 | PC6 | 4 |
| 5 | VDD | E5V | 6 | 5 | PB9 | PC5 | 6 |
| 7 | BOOT0 ⁽¹⁾ | GND | 8 | 7 | AVDD | U5V ⁽²⁾ | 8 |
| 9 | - | - | 10 | 9 | GND | - | 10 |
| 11 | - | IOREF | 12 | 11 | PB13 | PA12 | 12 |
| 13 | PA13 ⁽³⁾ | RESET | 14 | 13 | PB14 | PA11 | 14 |
| 15 | PA14 ⁽³⁾ | +3V3 | 16 | 15 | PB15 | PB12 | 16 |
| 17 | PA15 | +5V | 18 | 17 | PB6 | PB11 | 18 |
| 19 | GND | GND | 20 | 19 | PC7 | GND | 20 |
| 21 | PB7 | GND | 22 | 21 | PA9 | PB2 | 22 |
| 23 | PC13 | VIN | 24 | 23 | PA8 | PB1 | 24 |
| 25 | PC14 | - | 26 | 25 | PB10 | PA7 | 26 |
| 27 | PC15 | PA0 | 28 | 27 | PB4 | PA6 | 28 |
| 29 | PF0 | PA1 | 30 | 29 | PB5 | PA5 | 30 |
| 31 | PF1 | PA4 | 32 | 31 | PB3 | AGND | 32 |
| 33 | VBAT | PB0 | 34 | 33 | PA10 | PC4 | 34 |
| 35 | PC2 | PC1 or PB9 ⁽⁴⁾ | 36 | 35 | PA2 | - | 36 |
| 37 | PC3 | PC0 or PB8 ⁽⁴⁾ | 38 | 37 | PA3 | - | 38 |

1. Default state of BOOT0 is 0. It can be set to 1 when a jumper is on pin5-7 of CN7. Two unused jumpers are available on CN11 and CN12 (bottom side of the board).
2. U5V is 5V power from ST-LINK/V2-1 USB connector and it rises before +5V.
3. PA13 and PA14 share with SWD signals connected to ST-LINK/V2-1, it is not recommend to use them as IO pins if ST-LINK part is not cut.
4. Refer to [Table 9: Solder bridges](#) for details.

**Table 27. ST morpho connector on NUCLEO-F401RE,
NUCLEO-F411RE, NUCLEO-F446RE**

| CN7 odd pins | | CN7 even pins | | CN10 odd pins | | CN10 even pins | |
|--------------|----------------------|------------------------------|-----|---------------|------|--------------------|-----|
| Pin | Name | Name | Pin | Pin | Name | Name | Pin |
| 1 | PC10 | PC11 | 2 | 1 | PC9 | PC8 | 2 |
| 3 | PC12 | PD2 | 4 | 3 | PB8 | PC6 | 4 |
| 5 | VDD | E5V | 6 | 5 | PB9 | PC5 | 6 |
| 7 | BOOT0 ⁽¹⁾ | GND | 8 | 7 | AVDD | U5V ⁽²⁾ | 8 |
| 9 | - | - | 10 | 9 | GND | - | 10 |
| 11 | - | IOREF | 12 | 11 | PA5 | PA12 | 12 |
| 13 | PA13 ⁽³⁾ | RESET | 14 | 13 | PA6 | PA11 | 14 |
| 15 | PA14 ⁽³⁾ | +3V3 | 16 | 15 | PA7 | PB12 | 16 |
| 17 | PA15 | +5V | 18 | 17 | PB6 | - | 18 |
| 19 | GND | GND | 20 | 19 | PC7 | GND | 20 |
| 21 | PB7 | GND | 22 | 21 | PA9 | PB2 | 22 |
| 23 | PC13 | VIN | 24 | 23 | PA8 | PB1 | 24 |
| 25 | PC14 | - | 26 | 25 | PB10 | PB15 | 26 |
| 27 | PC15 | PA0 | 28 | 27 | PB4 | PB14 | 28 |
| 29 | PH0 | PA1 | 30 | 29 | PB5 | PB13 | 30 |
| 31 | PH1 | PA4 | 32 | 31 | PB3 | AGND | 32 |
| 33 | VBAT | PB0 | 34 | 33 | PA10 | PC4 | 34 |
| 35 | PC2 | PC1 or PB9 ⁽⁴⁾ | 36 | 35 | PA2 | - | 36 |
| 37 | PC3 | PC0 or PB8 ⁽⁴⁾ | 38 | 37 | PA3 | - | 38 |

1. Default state of BOOT0 is 0. It can be set to 1 when a jumper is on pin5-7 of CN7. Two unused jumpers are available on CN11 and CN12 (bottom side of the board).
2. U5V is 5 V power from ST-LINK/V2-1 USB connector and it rises before +5V.
3. PA13 and PA14 share with SWD signals connected to ST-LINK/V2-1, it is not recommend to use them as IO pins if ST-LINK part is not cut.
4. Refer to [Table 9: Solder bridges](#) for details.

**Table 28. ST morpho connector on
NUCLEO-L053R8, NUCLEO-L073RZ, NUCLEO-L152RE**

| CN7 odd pins | | CN7 even pins | | CN10 odd pins | | CN10 even pins | |
|--------------|----------------------|---------------------------|-----|---------------|------|--------------------|-----|
| Pin | Name | Name | Pin | Pin | Name | Name | Pin |
| 1 | PC10 | PC11 | 2 | 1 | PC9 | PC8 | 2 |
| 3 | PC12 | PD2 | 4 | 3 | PB8 | PC6 | 4 |
| 5 | VDD | E5V | 6 | 5 | PB9 | PC5 | 6 |
| 7 | BOOT0 ⁽¹⁾ | GND | 8 | 7 | AVDD | U5V ⁽²⁾ | 8 |
| 9 | - | - | 10 | 9 | GND | - | 10 |
| 11 | - | IOREF | 12 | 11 | PA5 | PA12 | 12 |
| 13 | PA13 ⁽³⁾ | RESET | 14 | 13 | PA6 | PA11 | 14 |
| 15 | PA14 ⁽³⁾ | +3V3 | 16 | 15 | PA7 | PB12 | 16 |
| 17 | PA15 | +5V | 18 | 17 | PB6 | PB11 | 18 |
| 19 | GND | GND | 20 | 19 | PC7 | GND | 20 |
| 21 | PB7 | GND | 22 | 21 | PA9 | PB2 | 22 |
| 23 | PC13 | VIN | 24 | 23 | PA8 | PB1 | 24 |
| 25 | PC14 | - | 26 | 25 | PB10 | PB15 | 26 |
| 27 | PC15 | PA0 | 28 | 27 | PB4 | PB14 | 28 |
| 29 | PH0 | PA1 | 30 | 29 | PB5 | PB13 | 30 |
| 31 | PH1 | PA4 | 32 | 31 | PB3 | AGND | 32 |
| 33 | VLCD | PB0 | 34 | 33 | PA10 | PC4 | 34 |
| 35 | PC2 | PC1 or PB9 ⁽⁴⁾ | 36 | 35 | PA2 | - | 36 |
| 37 | PC3 | PC0 or PB8 ⁽⁴⁾ | 38 | 37 | PA3 | - | 38 |

1. Default state of BOOT0 is 0. It can be set to 1 when a jumper is on pin5-7 of CN7. Two unused jumpers are available on CN11 and CN12 (bottom side of the board).
2. U5V is 5 V power from ST-LINK/V2-1 USB connector and it rises before +5V.
3. PA13 and PA14 share with SWD signals connected to ST-LINK/V2-1, it is not recommend to use them as IO pins if ST-LINK part is not cut.
4. Refer to [Table 9: Solder bridges](#) for details.

Table 29. ST morpho connector on NUCLEO-L476RG

| CN7 odd pins | | CN7 even pins | | CN10 odd pins | | CN10 even pins | |
|--------------|----------------------|------------------------------|-----|---------------|------|--------------------|-----|
| Pin | Name | Name | Pin | Pin | Name | Name | Pin |
| 1 | PC10 | PC11 | 2 | 1 | PC9 | PC8 | 2 |
| 3 | PC12 | PD2 | 4 | 3 | PB8 | PC6 | 4 |
| 5 | VDD | E5V | 6 | 5 | PB9 | PC5 | 6 |
| 7 | BOOT0 ⁽¹⁾ | GND | 8 | 7 | AVDD | U5V ⁽²⁾ | 8 |
| 9 | - | - | 10 | 9 | GND | - | 10 |
| 11 | - | IOREF | 12 | 11 | PA5 | PA12 | 12 |
| 13 | PA13 ⁽³⁾ | RESET | 14 | 13 | PA6 | PA11 | 14 |
| 15 | PA14 ⁽³⁾ | +3V3 | 16 | 15 | PA7 | PB12 | 16 |
| 17 | PA15 | +5V | 18 | 17 | PB6 | PB11 | 18 |
| 19 | GND | GND | 20 | 19 | PC7 | GND | 20 |
| 21 | PB7 | GND | 22 | 21 | PA9 | PB2 | 22 |
| 23 | PC13 | VIN | 24 | 23 | PA8 | PB1 | 24 |
| 25 | PC14 | - | 26 | 25 | PB10 | PB15 | 26 |
| 27 | PC15 | PA0 | 28 | 27 | PB4 | PB14 | 28 |
| 29 | PH0 | PA1 | 30 | 29 | PB5 | PB13 | 30 |
| 31 | PH1 | PA4 | 32 | 31 | PB3 | AGND | 32 |
| 33 | VBAT | PB0 | 34 | 33 | PA10 | PC4 | 34 |
| 35 | PC2 | PC1 or PB9 ⁽⁴⁾ | 36 | 35 | PA2 | - | 36 |
| 37 | PC3 | PC0 or PB8 ⁽⁴⁾ | 38 | 37 | PA3 | - | 38 |

1. Default state of BOOT0 is 0. It can be set to 1 when a jumper is on pin5-7 of CN7.
2. U5V is 5 V power from ST-LINK/V2-1 USB connector and it rises before +5V.
3. PA13 and PA14 share with SWD signals connected to ST-LINK/V2-1, it is not recommend to use them as IO pins if ST-LINK part is not cut.
4. Refer to [Table 9: Solder bridges](#) for details.


Table 30. ST morpho connector on NUCLEO-F410RB

| CN7 odd pins | | CN7 even pins | | CN10 odd pins | | CN10 even pins | |
|--------------|----------------------|---------------------------|-----|---------------|------|--------------------|-----|
| Pin | Name | Name | Pin | Pin | Name | Name | Pin |
| 1 | PC10 | PC11 | 2 | 1 | PC9 | PC8 | 2 |
| 3 | PC12 | PB11 | 4 | 3 | PB8 | PC6 | 4 |
| 5 | VDD | E5V | 6 | 5 | PB9 | PC5 | 6 |
| 7 | BOOT0 ⁽¹⁾ | GND | 8 | 7 | AVDD | U5V ⁽²⁾ | 8 |
| 9 | - | - | 10 | 9 | GND | - | 10 |
| 11 | - | IOREF | 12 | 11 | PA5 | PA12 | 12 |
| 13 | PA13 ⁽³⁾ | RESET | 14 | 13 | PA6 | PA11 | 14 |
| 15 | PA14 ⁽³⁾ | +3V3 | 16 | 15 | PA7 | PB12 | 16 |
| 17 | PA15 | +5V | 18 | 17 | PB6 | - | 18 |
| 19 | GND | GND | 20 | 19 | PC7 | GND | 20 |
| 21 | PB7 | GND | 22 | 21 | PA9 | PB2 | 22 |
| 23 | PC13 | VIN | 24 | 23 | PA8 | PB1 | 24 |
| 25 | PC14 | - | 26 | 25 | PB10 | PB15 | 26 |
| 27 | PC15 | PA0 | 28 | 27 | PB4 | PB14 | 28 |
| 29 | PH0 | PA1 | 30 | 29 | PB5 | PB13 | 30 |
| 31 | PH1 | PA4 | 32 | 31 | PB3 | AGND | 32 |
| 33 | VBAT | PB0 | 34 | 33 | PA10 | PC4 | 34 |
| 35 | PC2 | PC1 or PB9 ⁽⁴⁾ | 36 | 35 | PA2 | - | 36 |
| 37 | PC3 | PC0 or PB8 ⁽⁴⁾ | 38 | 37 | PA3 | - | 38 |

1. Default state of BOOT0 is 0. It can be set to 1 when a jumper is on pin5-7 of CN7.
2. U5V is 5V power from ST-LINKV2-1 USB connector and it rises before +5V.
3. PA13 and PA14 share with SWD signals connected to ST-LINK/V2-1, it is not recommend to use them as IO pins if ST-LINK part is not cut.
4. Refer to [Table 9: Solder bridges](#) for details.

7 Mechanical dimensions

Figure 25. STM32 Nucleo board mechanical dimensions

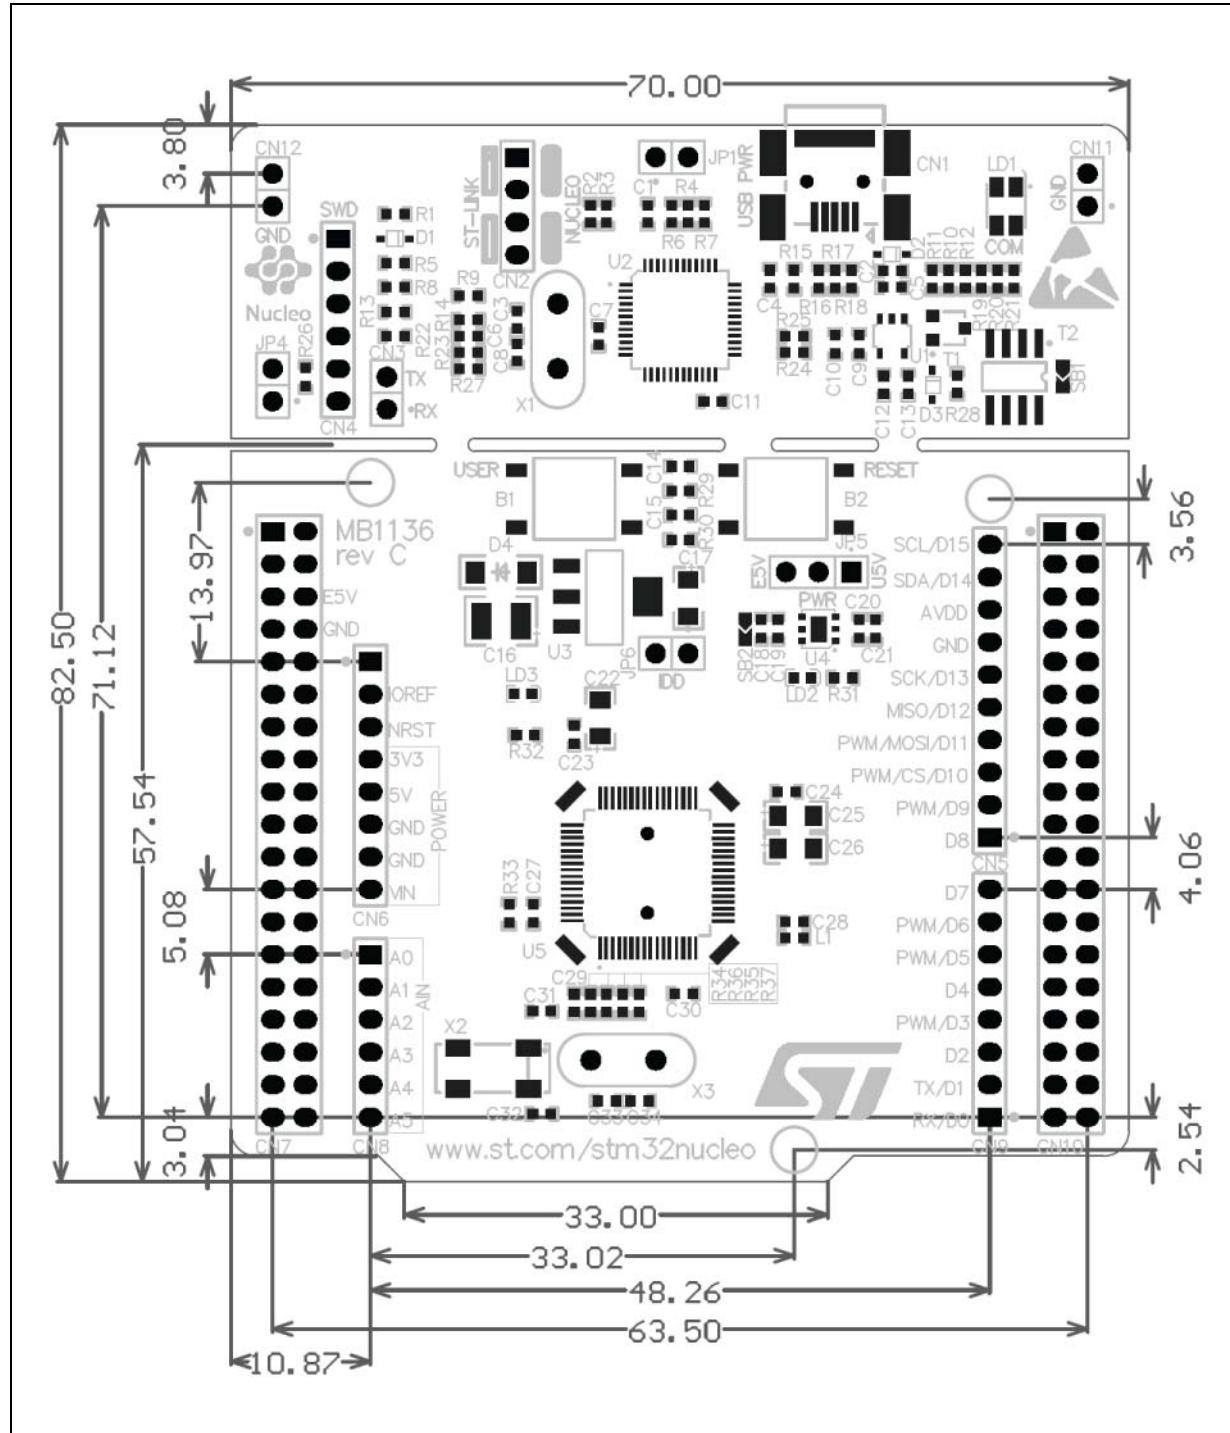

Electrical schematics

[Figure 26](#) to [Figure 29](#) show the electrical schematics of the STM32 Nucleo board.

Figure 26. Top and Power(1/4)


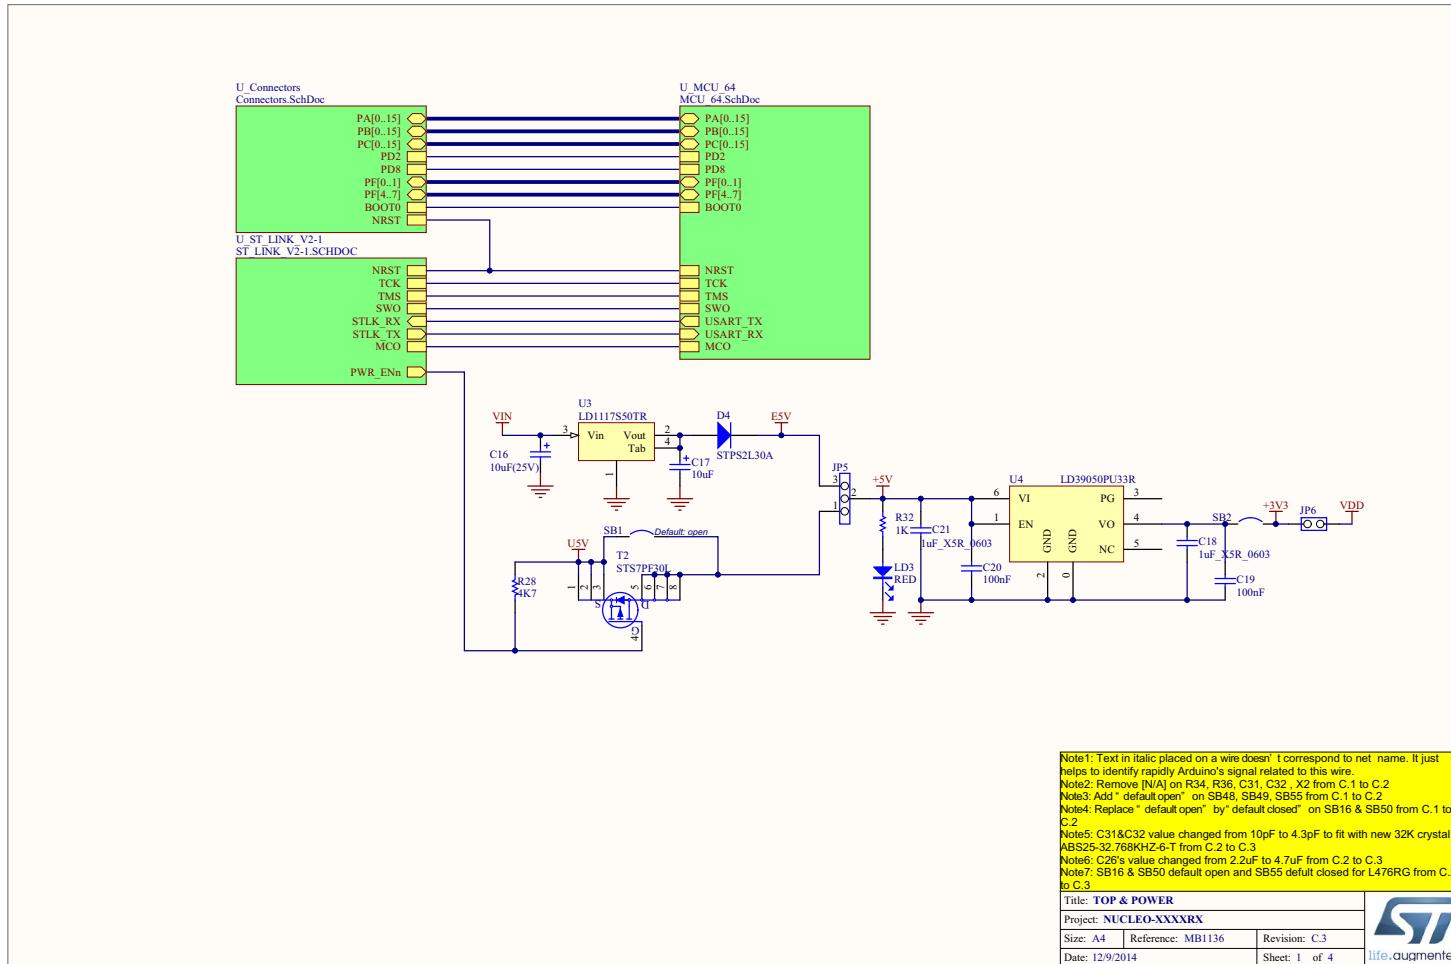


Figure 27. MCU (2/4)

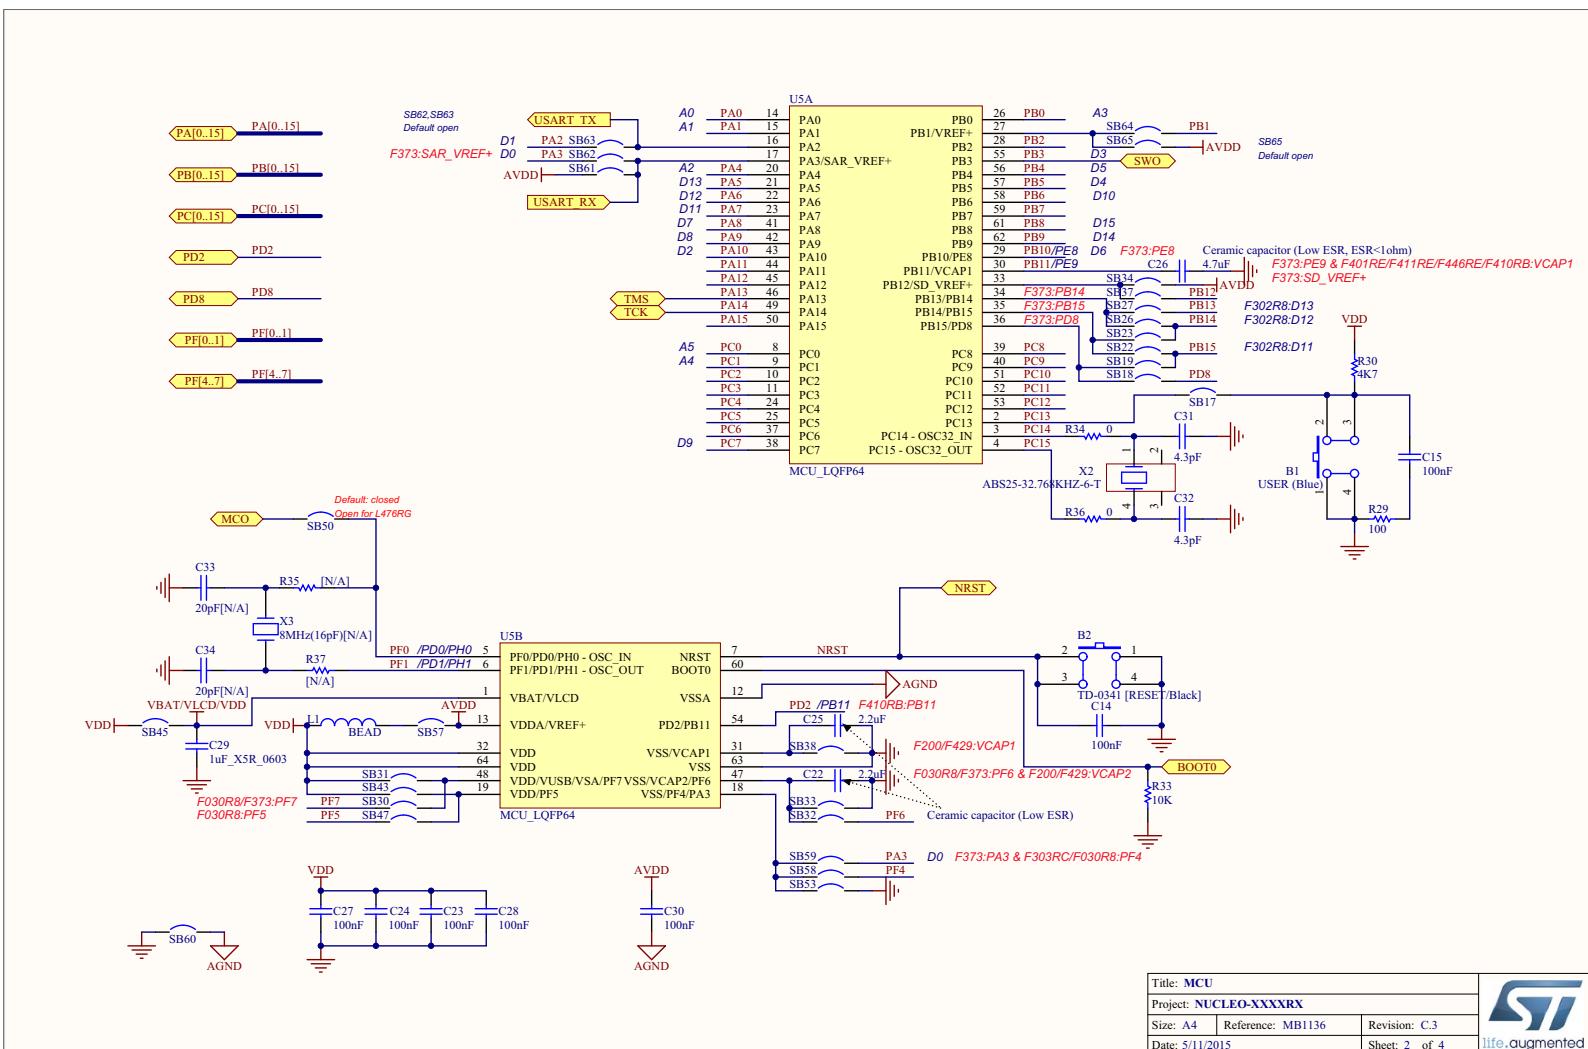

| | | | |
|------------------------|-------------------|---------------|------------------------------|
| Title: MCU | | | |
| Project: NUCLEO-XXXXRX | | | |
| Size: A4 | Reference: MB1136 | Revision: C.3 | |
| Date: 5/11/2015 | | | Sheet: 2 of 4 life.augmented |



Figure 28. ST-LINK/V2-1 (3/4)


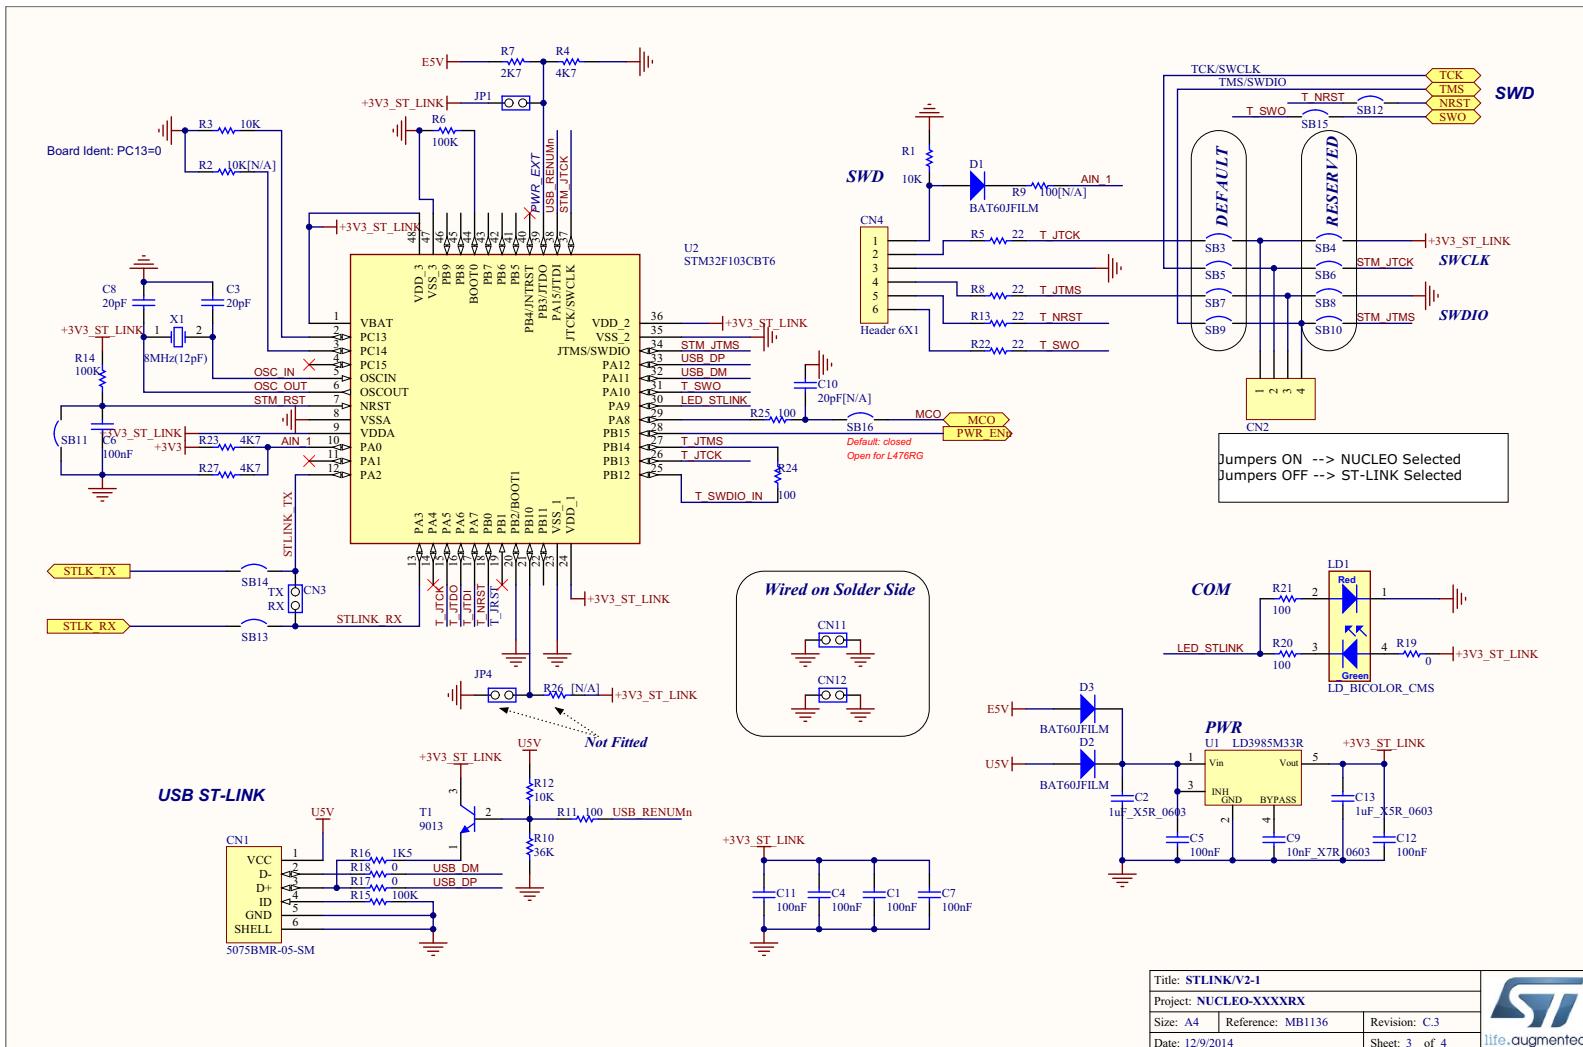


Figure 29. Extension connectors (4/4)

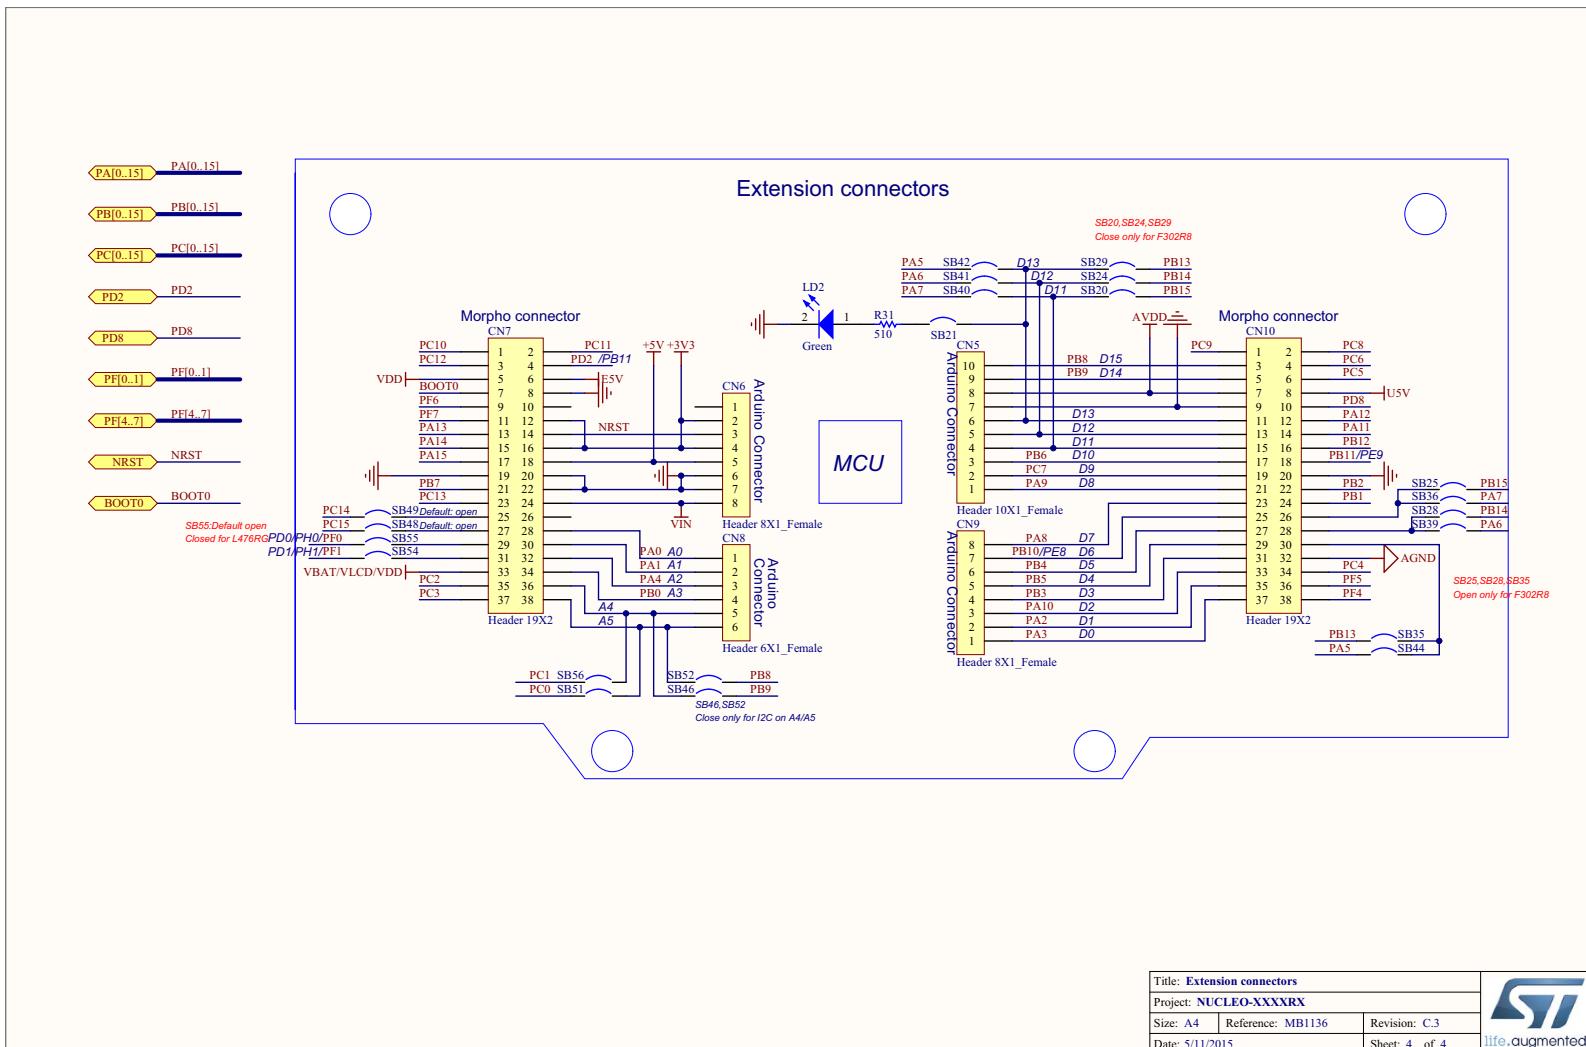

9 Revision history

Table 31. Document revision history

| Date | Revision | Changes |
|--------------|----------|---|
| 10-Feb-2014 | 1 | Initial release. |
| 13-Feb-2014 | 2 | Updated Figure 1 , Chapter 5 and Table 9 . |
| 11-Apr-2014 | 3 | Extended the applicability to NUCLEO-F302R8. Updated Table 1: Ordering information , Section 6.11: Arduino connectors and Section 6.12: ST morpho connector . Updated Figure 1 |
| 10-June-2014 | 4 | Updated the board figure: Figure 1 . Updated HSE and LSE configuration description: Section 6.7.1 , Section 5 and Section 6.7.2 . Extended the applicability to NUCLEO-F334R8, NUCLEO-F411RE and NUCLEO-L053R8. |
| 20-June-2014 | 5 | Updated the electrical schematics figures: Figure 26 , Figure 27 , Figure 28 and Figure 29 . Refer to the AN2867 for oscillator design guide for STM32 microcontrollers in Section 6.7.1: OSC clock supply and Section 6.7.2: OSC 32 KHz clock supply . |
| 30-Sept-2014 | 6 | Extended the applicability to NUCLEO-F091RC and NUCLEO-F303RE; Updated Table 1: Ordering information ; Updated Table 10: Arduino connectors on NUCLEO-F030R8, NUCLEO-F070RB, NUCLEO-F072RB, NUCLEO-F091RC ; Updated Table 24: ST morpho connector on NUCLEO-F072RB, NUCLEO-F091RC, NUCLEO-F303RE, NUCLEO-F334R8 ; Updated Figure 5: Typical configuration ; Added Figure 12: NUCLEO-F091RC ; Added Figure 15: NUCLEO-F303RE ; Updated Section 6.7.2: OSC 32 KHz clock supply ; Updated Figure 26: Top and Power(1/4) , Figure 27: MCU (2/4) ; |

Table 31. Document revision history (continued)

| Date | Revision | Changes |
|-------------|----------|---|
| 19-Jan-2015 | 7 | <p>Extended the applicability to NUCLEO-F070RB, NUCLEO-L073RZ and NUCLEO-L476RG;</p> <p>Updated Table 1: Ordering information;</p> <p>Updated Section 6.2: Embedded ST-LINK/V2-1;</p> <p>Updated Section 6.7.1: OSC clock supply;</p> <p>Added Figure 10: NUCLEO-F070RB;</p> <p>Added Figure 20: NUCLEO-L073RZ;</p> <p>Added Figure 22: NUCLEO-L476RG</p> <p>Updated Table 10: Arduino connectors on NUCLEO-F030R8, NUCLEO-F070RB, NUCLEO-F072RB, NUCLEO-F091RC</p> <p>Added Table 17: Arduino connectors on NUCLEO-L073RZ</p> <p>Added Table 21: Arduino connectors on NUCLEO-L476RG</p> <p>Added Table 23: ST morpho connector on NUCLEO-F070RB</p> <p>Updated Table 28: ST morpho connector on NUCLEO-L053R8, NUCLEO-L073RZ, NUCLEO-L152RE</p> <p>Added Table 29: ST morpho connector on NUCLEO-L476RG</p> <p>Updated schematics from Figure 26: Top and Power(1/4) to Figure 29: Extension connectors (4/4)</p> |
| 08-Jul-2015 | 8 | <p>Extended the applicability to Updated Table 1: Ordering information;</p> <p>Added Figure 23: NUCLEO-F446RE and Figure 24: NUCLEO-F410RB</p> <p>Updated Section 6.11: Arduino connectors on page 35 and Section 6.12: ST morpho connector on page 50</p> |
| 04-Aug-2015 | 9 | Added Section 4.3: NUCLEO-L476RG bootloader limitations . |
| 17-Nov-2015 | 10 | Updated Section 6.9: Solder bridges and Section 6.7.1: OSC clock supply . |

IMPORTANT NOTICE – PLEASE READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2015 STMicroelectronics – All rights reserved